

USE AND CARE GUIDE

USA Item 1013295825
Canada Item 1001906562
Mexico Item 230842
Model 25SV24802

15 ft Gruesome Grounds GIANT-SIZED ANIMATED LED Worricrow



**ASSEMBLY REQUIRES AT LEAST 2 ADULTS, 3 ADULTS ARE RECOMMENDED.
PLEASE FOLLOW THE STEP BY STEP GUIDE AND ENJOY YOUR 15FT WORRICROW!**


Questions, problems, missing parts? Before returning to the store, Please have a copy of your receipt ready and email the SVI customer experience team (customerservice@svius.com) within 90 days of the date of purchase or call Home Accents Holiday Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HOLIDAY (1-855-434-6543)
HOMEDEPOT.COM

PARTS LIST

- A. Base x 1
- B. Root Base x 1
- C. Bracers x 2
- D. Double Support Pole x 1
- E. Bottom Trunk Segment x 1
- F. Lower Trunk Segment x 1
- G. Middle Right Support Pole x 1
- H. Control Box Segment x 1
- I. Middle Left Support Pole x 1
- J. Upper Left Support Pole x 1
- K. Mid Left Trunk Segment x 1
- L. Upper Right Support Pole x 1
- M. Mid Right Trunk Segment x 1
- N. Pelvis x 1
- O. Chest x 1
- P. Costume x 1
- Q. Collar x 1
- R. Left Arm x 1
- S. Left Forearm x 1
- T. Right Arm x 1
- U. Right Forearm x 1
- V. Head x 1
- W. Hat x 1
- X. Head Cap x 1
- Y. Left Thigh Cap x 1
- Z. Right Thigh Cap x 1
- Z1. Lower Body Segment Cap x 1
- Z2. Middle Body Segment Cap x 1
- Z3. Base Extensions x 6
- Z4. Loop Screw x 1
- Z5. Tether Cable x 1
- Z6. Small Parts Bag x 1
- Z7. Stakes x 4
- Z8. Adapter * x 1

Power Adapter * Spec
Input: 120V~50/60Hz
Output: 5.9V === 1.5A
Wattage: 8.85W

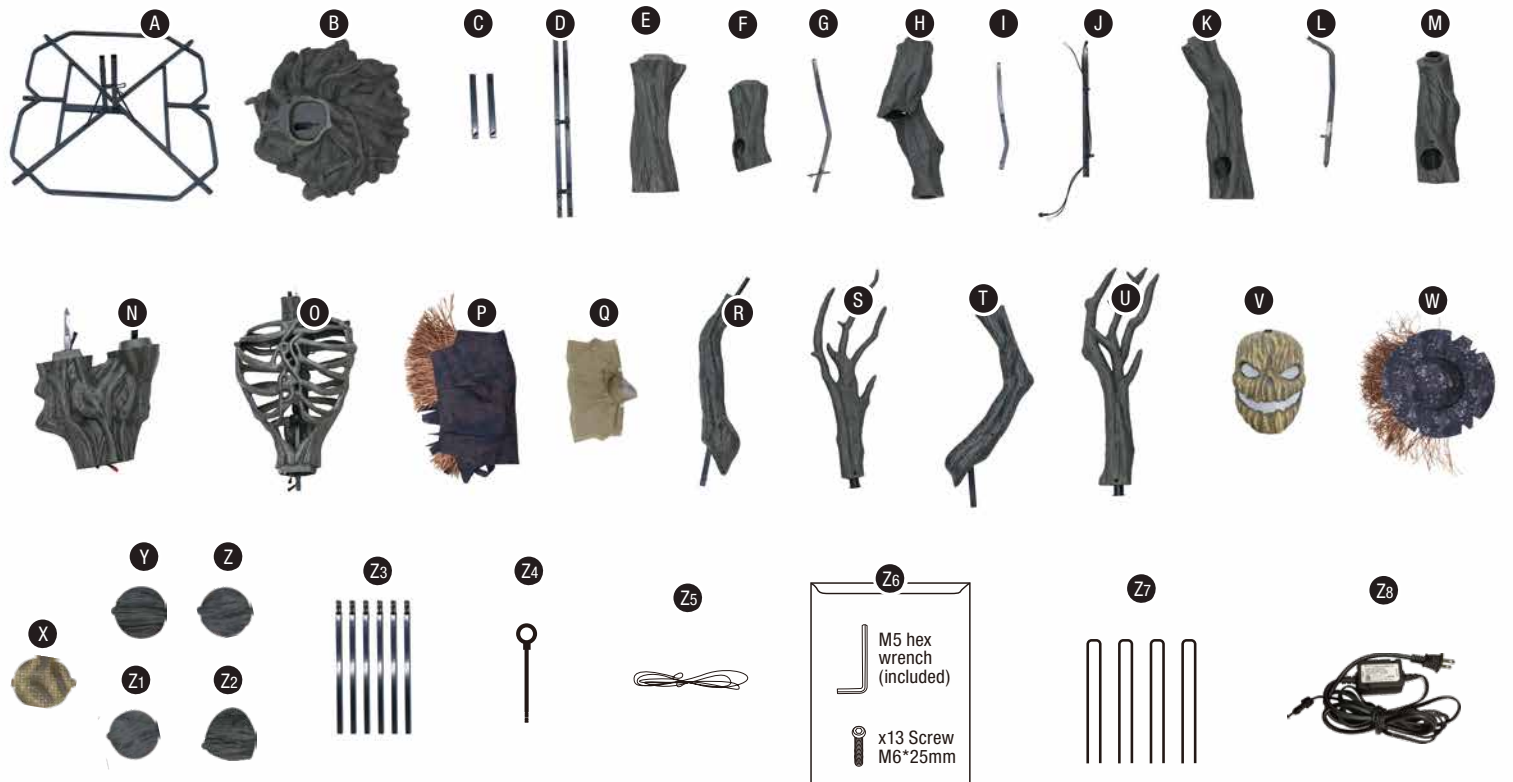


NOTE: Throughout the instructions, Right and Left are relative to the character.
Hex wrench included for assembly.




1.1






1.2




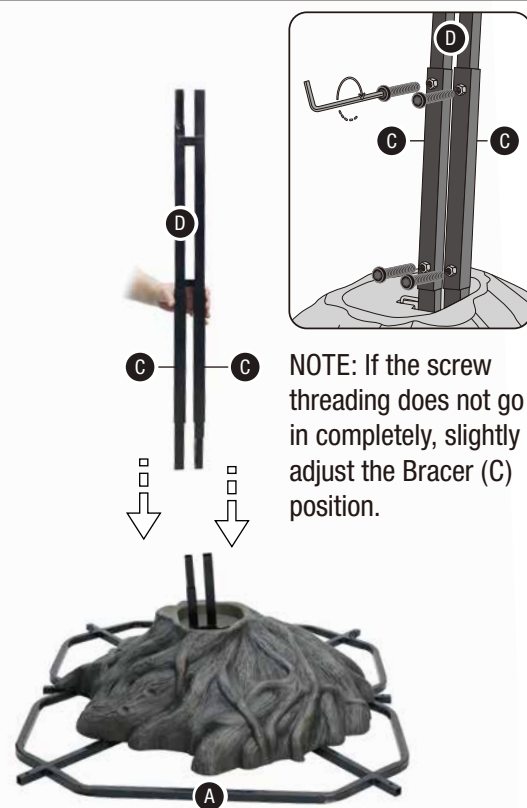







2.1

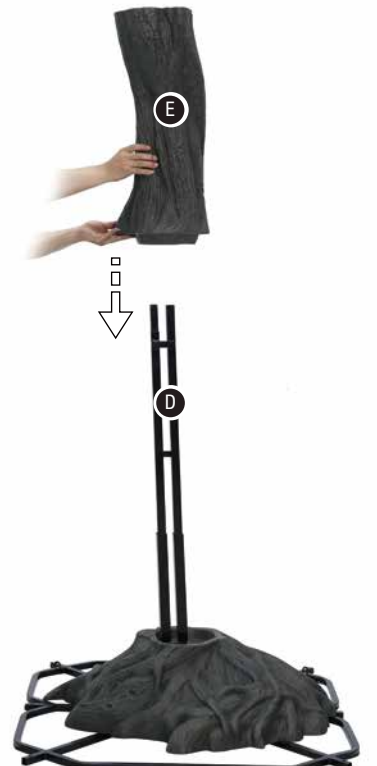


2.2

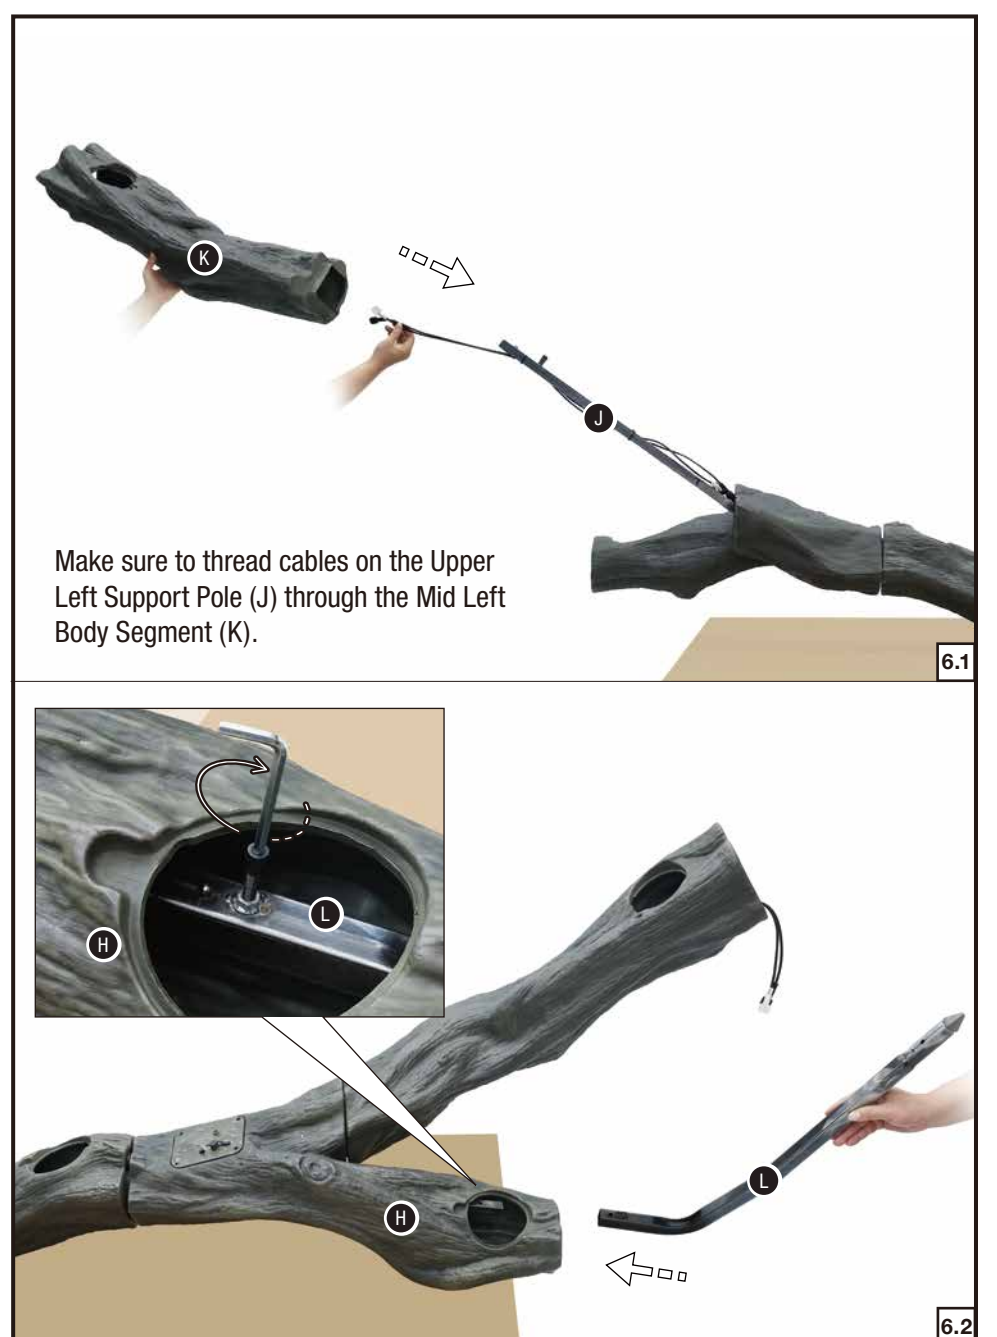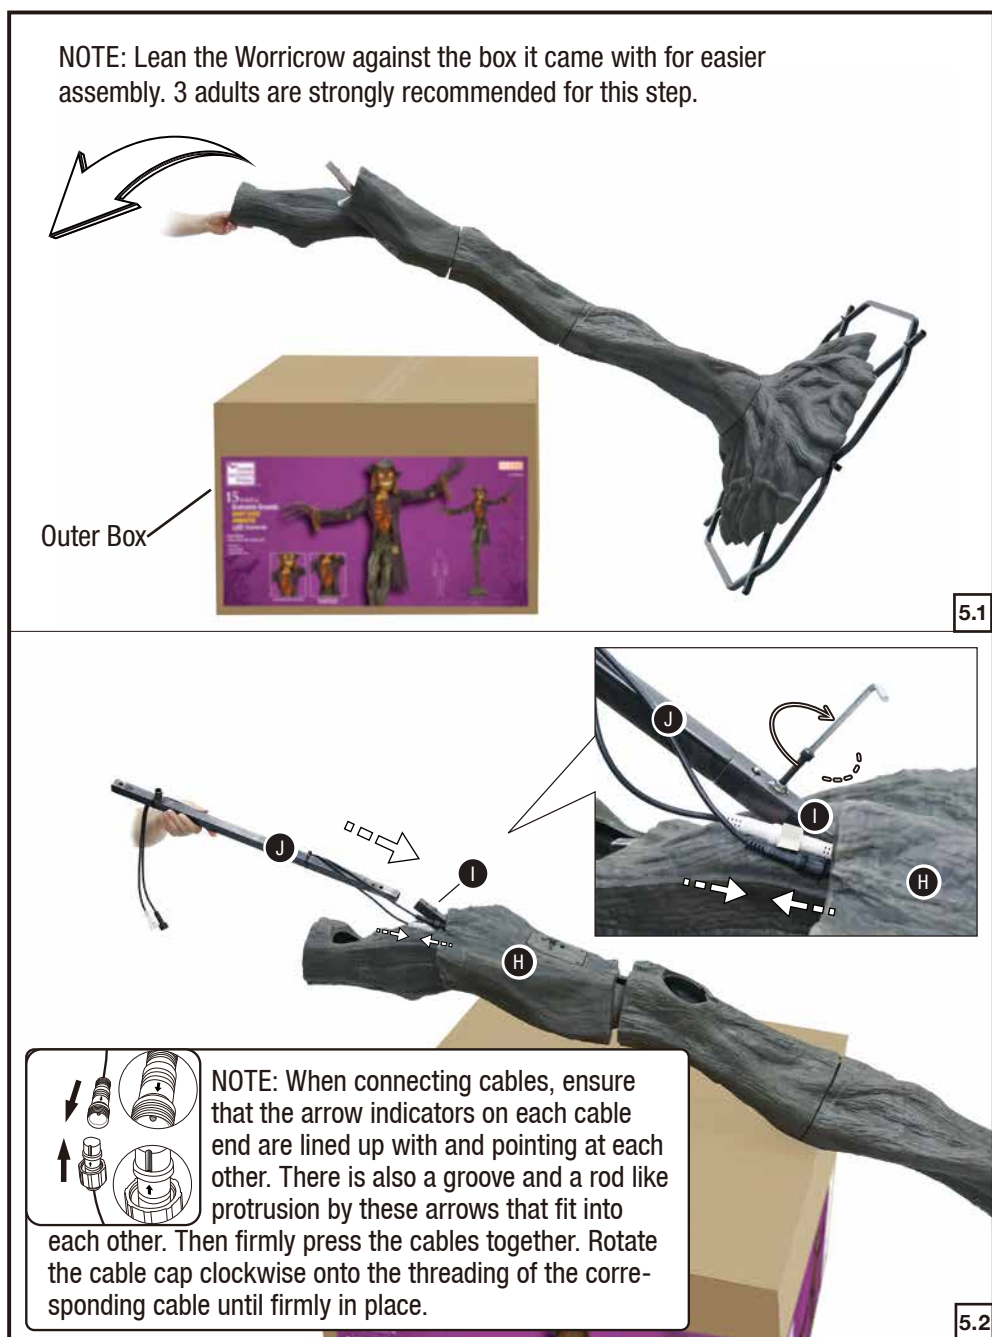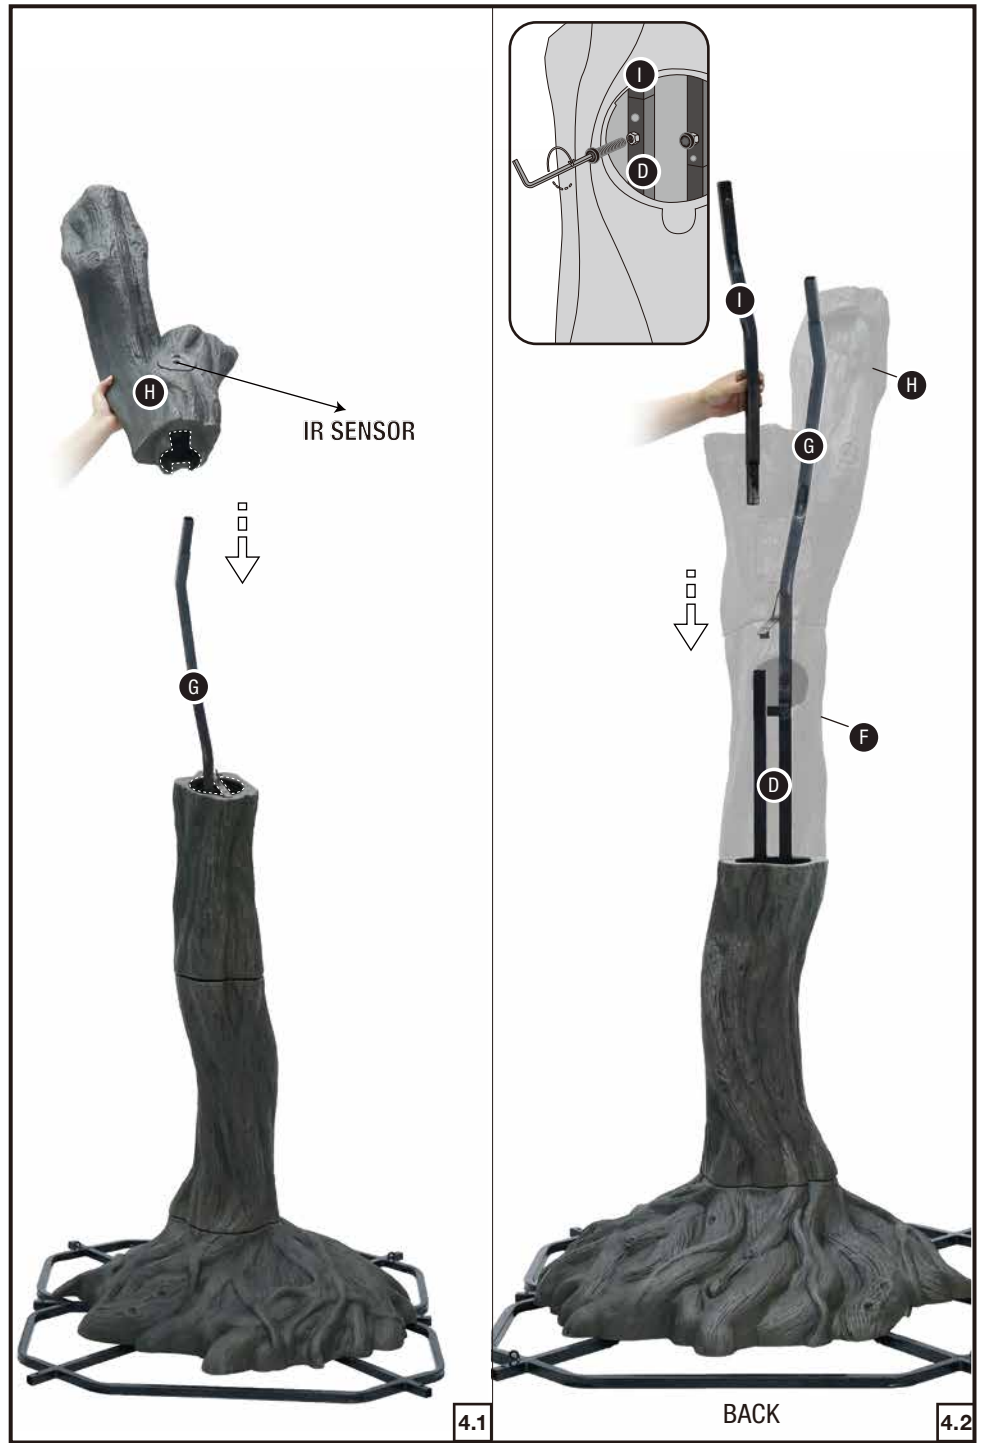

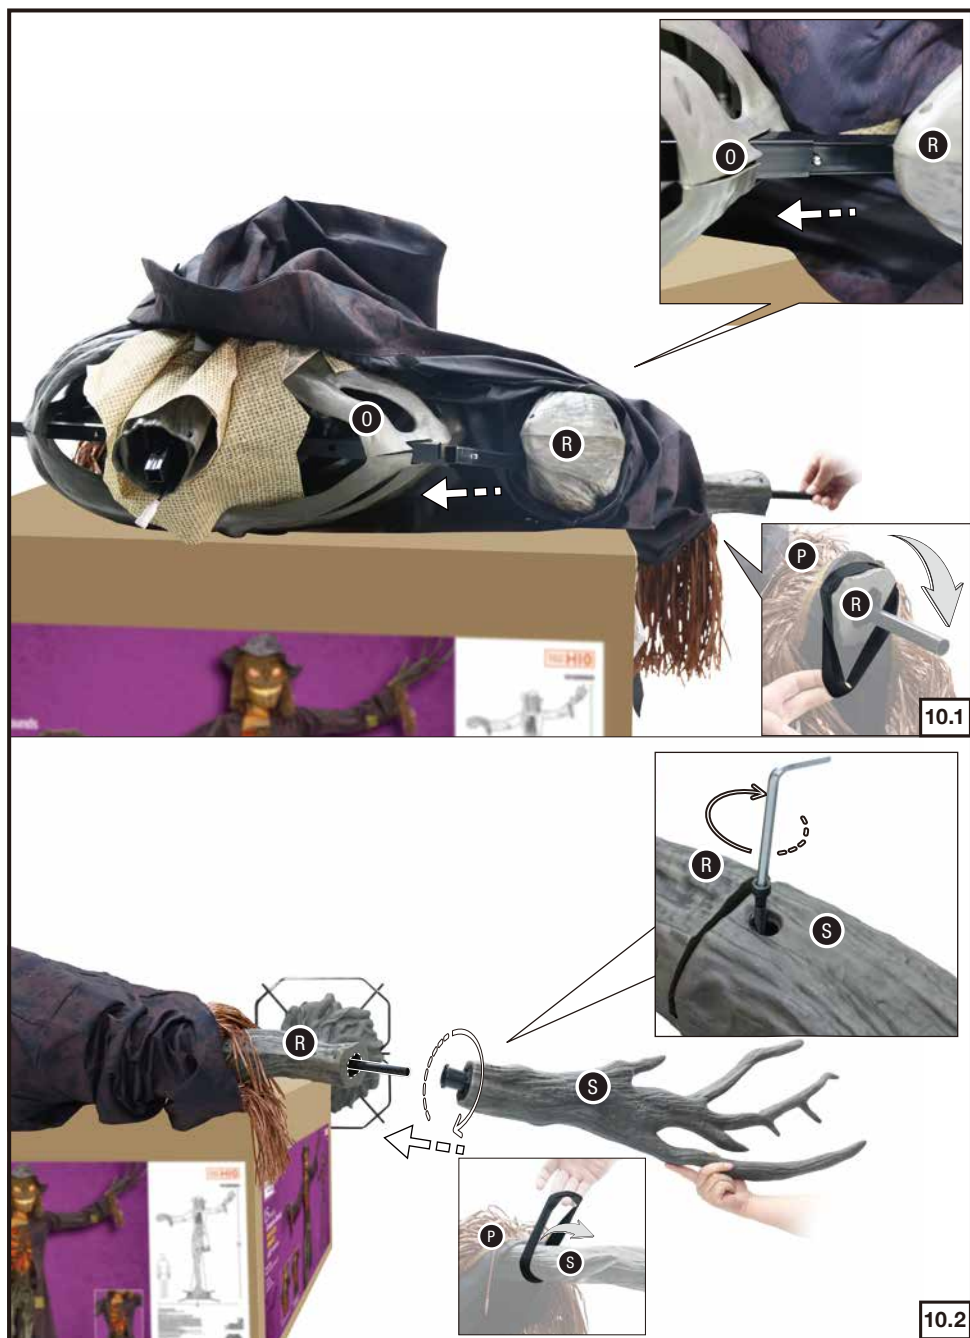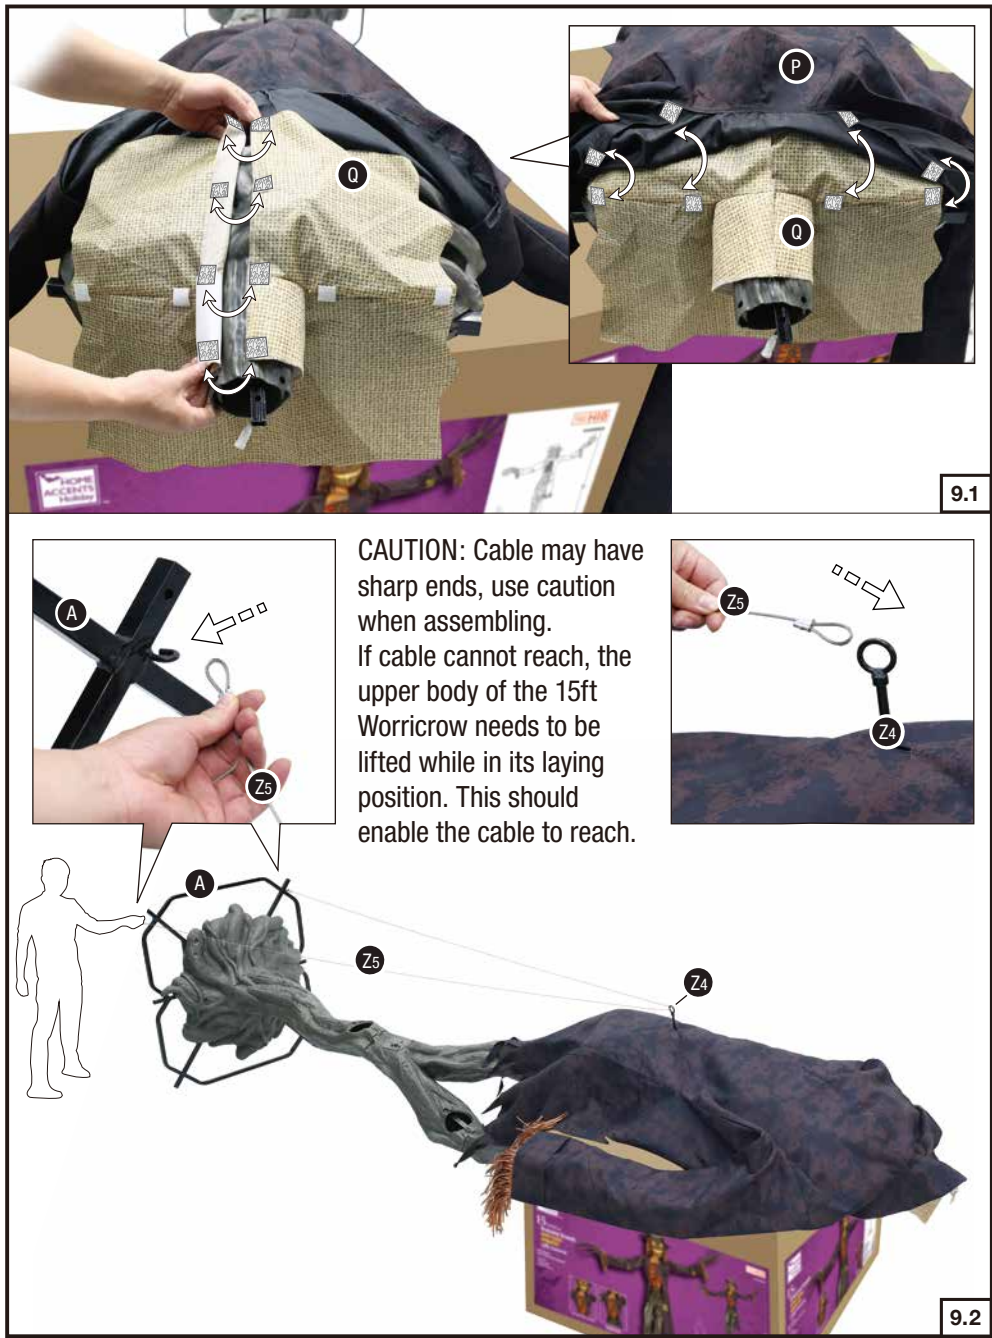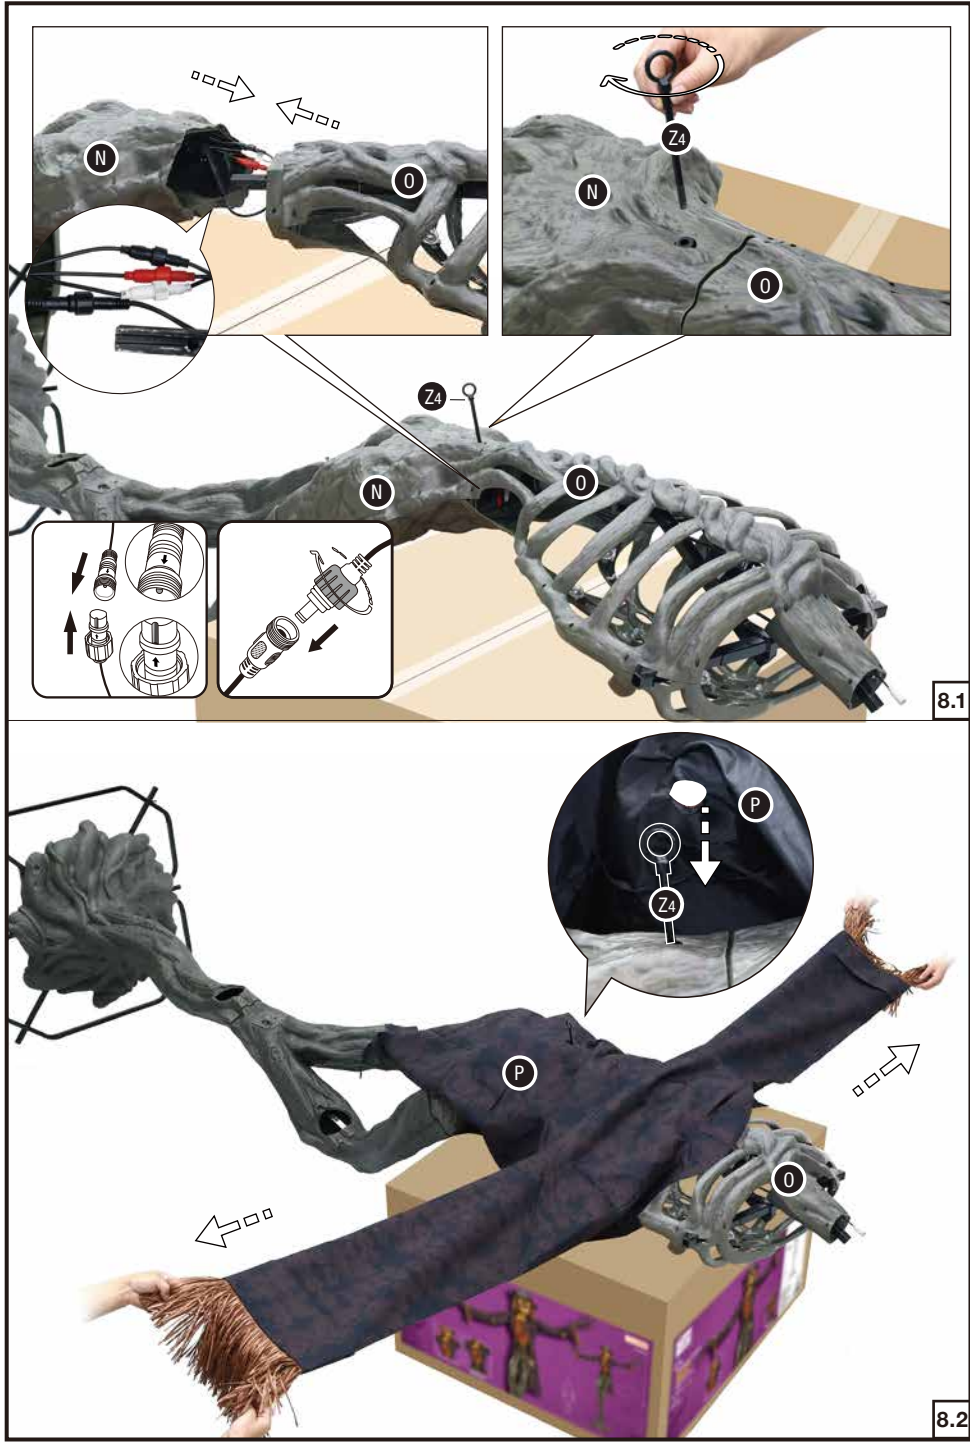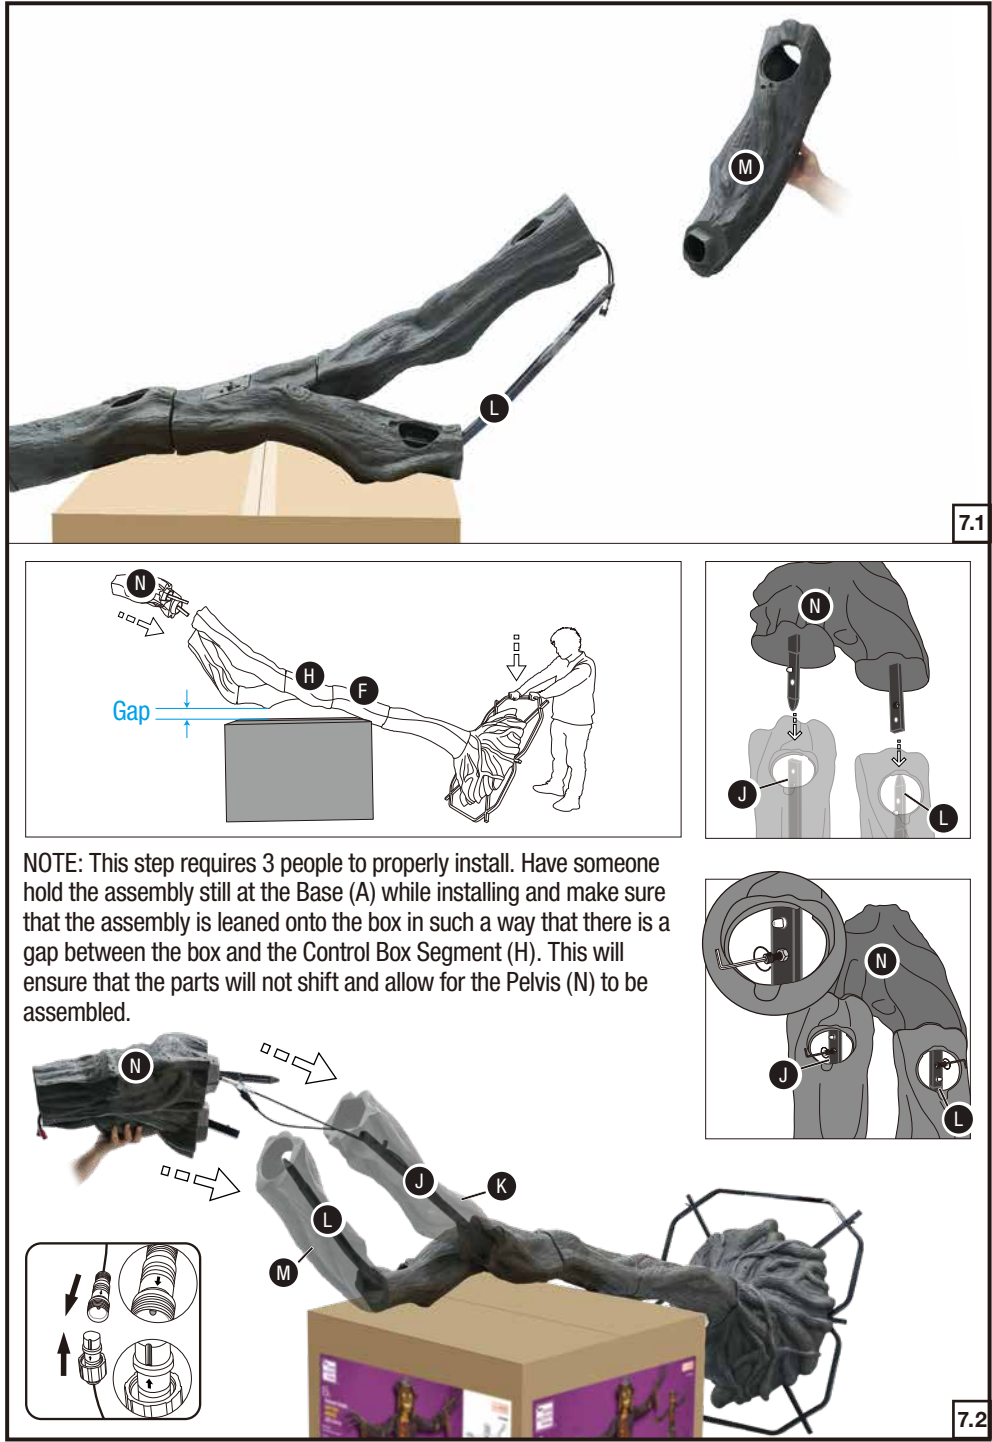

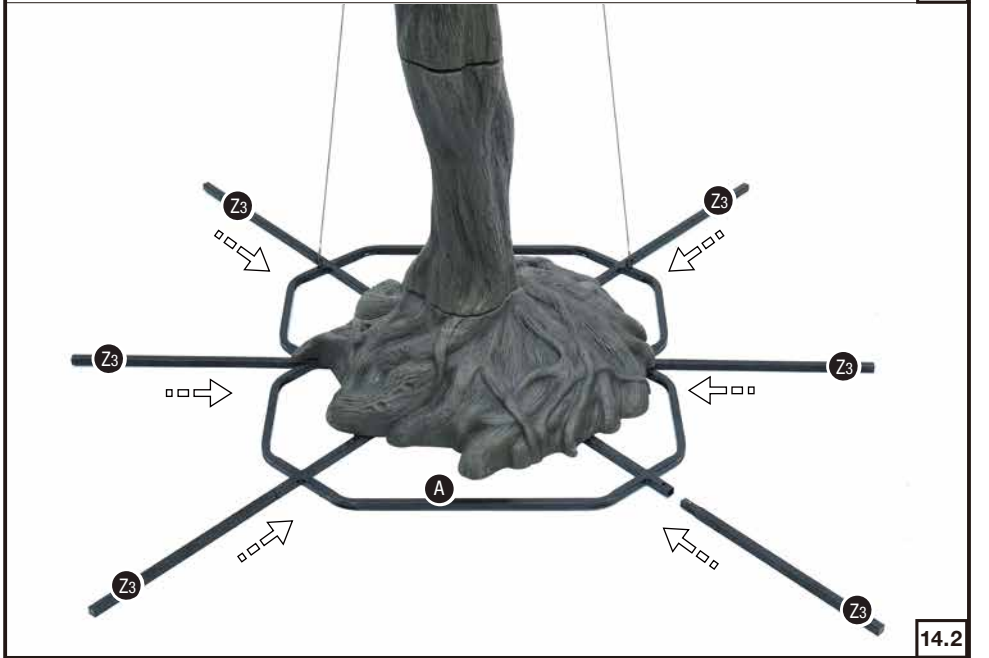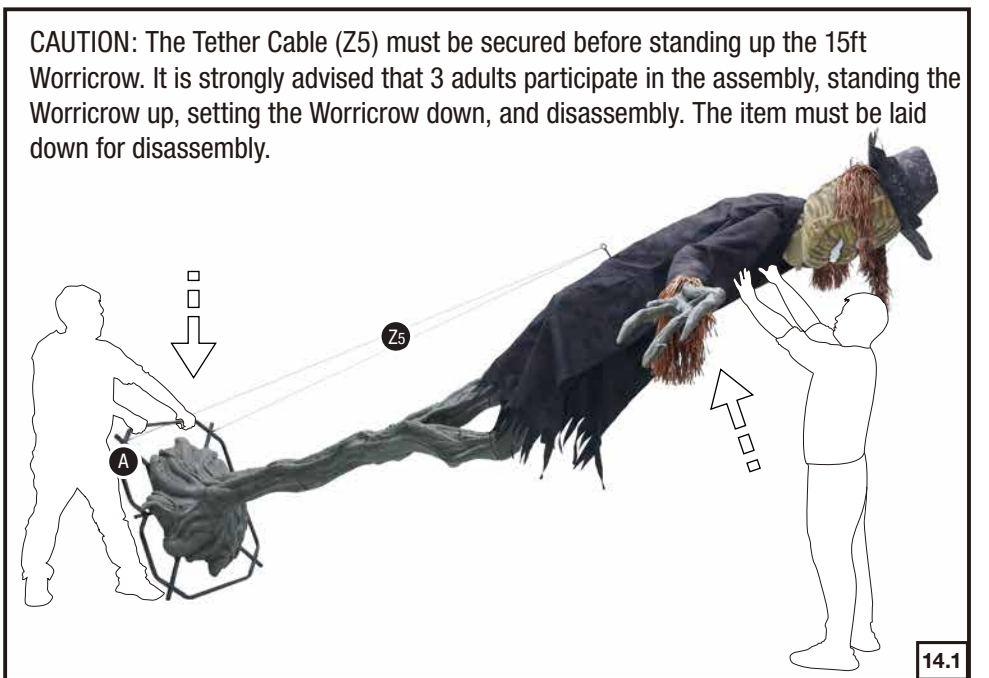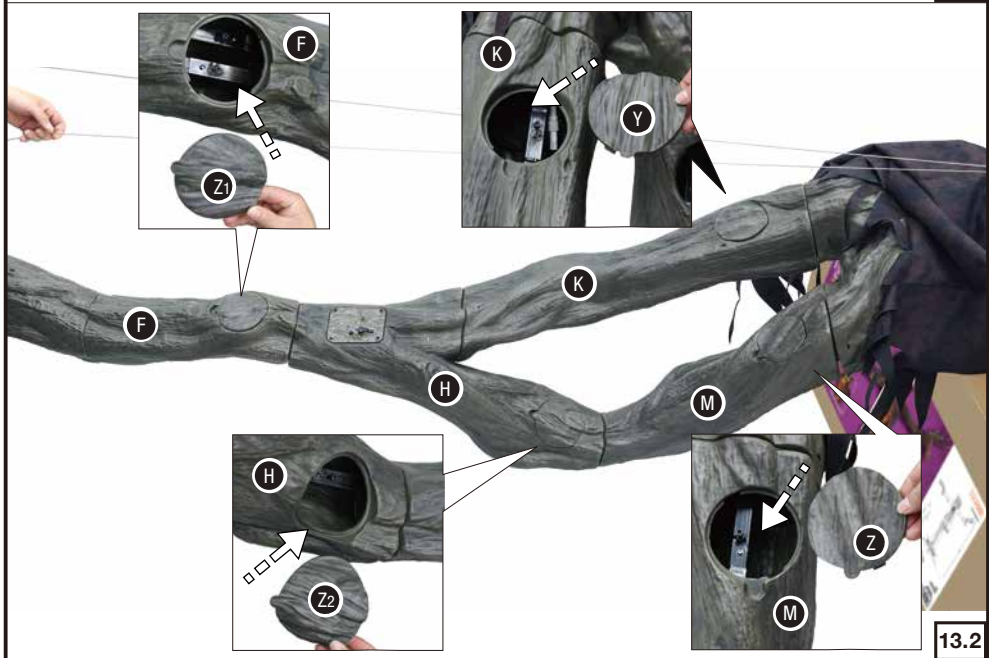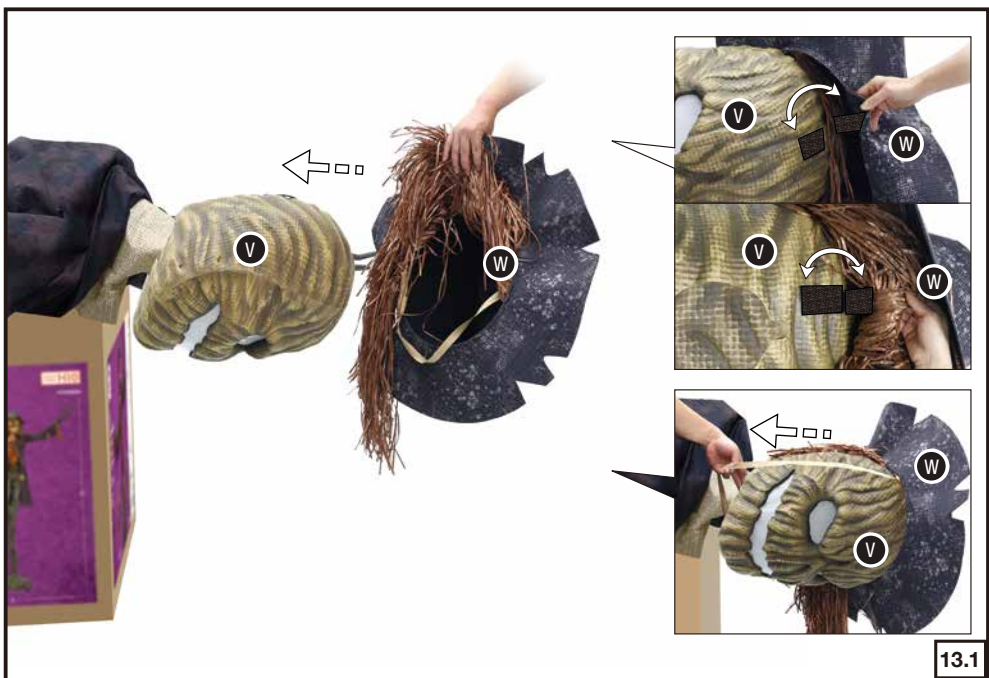
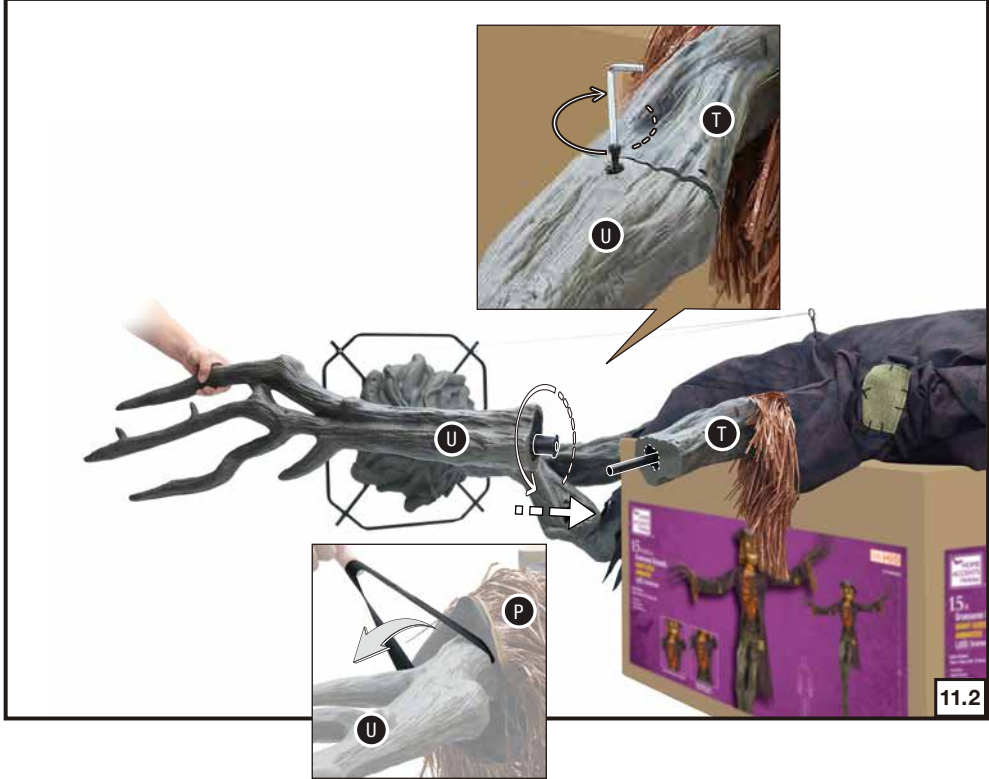


NOTE: If your application requires additional stability, add weights on top of the base (for example sand bags – not included). You can also add guy wires (not included) for added stability.

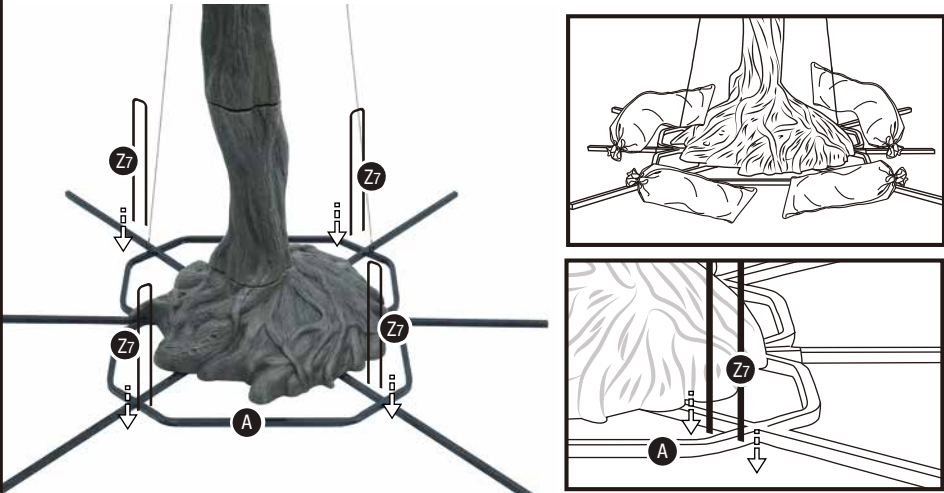

15.1

NOTE: When plugging the adapter into the 15ft Worricrow, ensure that the cap on the adapter cable is rotated clockwise until firmly in place as shown.

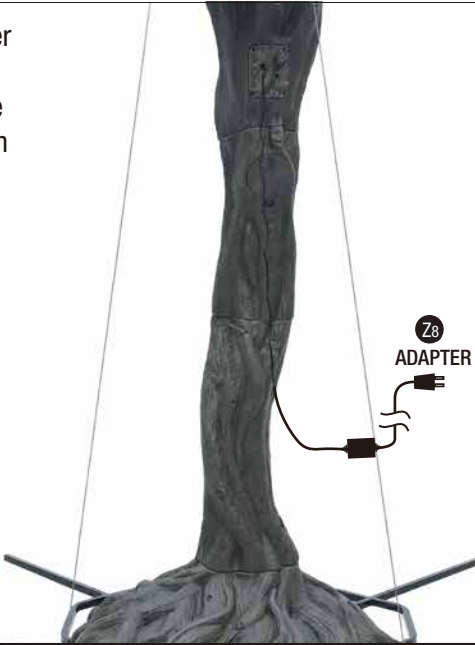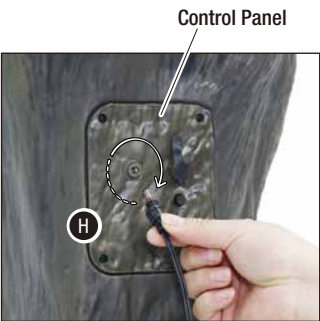

15.2

NOTE: Power button on the back of the Control Box Segment (H).
Position 15ft Worricrow on flat surfaces only.
Your 15ft Worricrow is now fully assembled. Plug in the adapter and turn on to let the fun begin!




NOTE: The 15ft Worricrow has 3 different function settings (LIGHTS ONLY, TIMER*SENSOR and OFF*STEP PAD). Settings can be controlled at the Control Panel located on the back side of the Control Box Segment (H).

OPERATION INSTRUCTIONS - CONTROL BOX:

Plug the power adapter into a standard power outlet. Locate the push button at the back of the Control Box Segment (H).

Button	Function Description
1 LIGHTS ONLY / ÉCLAIRAGE UNIQUEMENT / SÓLO LUCES	In this mode, the lights of the item will stay on indefinitely unless the switch mode is changed.
2 TIMER • SENSOR / MINUTEUR • DÉTECTEUR / TEMPORIZADOR • SENSOR	Set the switch to "TIMER * SENSOR" to activate the TIMER * SENSOR mode. This will activate SENSOR mode for 6 hours followed by a deactivated period of 18 hours. This cycle will continue indefinitely unless the setting is changed. During the 6-hour active period, the lights will always stay on, but the animation can be triggered by the Infra-red (IR) sensor. If the Infra-red (IR) sensor is activated, the 15ft Worricrow will activate for one activity cycle (animation). The infra-red (IR) sensor has a range of up to 4 m/13 ft and will activate when someone comes within an 80-degree angle from left to right as well as from above or below.
3 OFF • STEP PAD / ARRÊT • TAPIS ÉLECTRONIQUE / APAGAR • ALMOHADILLA DE PASO	This switch mode allows the item to be activated only if triggered by using a Step Pad or Try Me Button (Not Included). The item will operate for one activity cycle with each Step Pad or Try Me activation. Otherwise, the item will stay off.

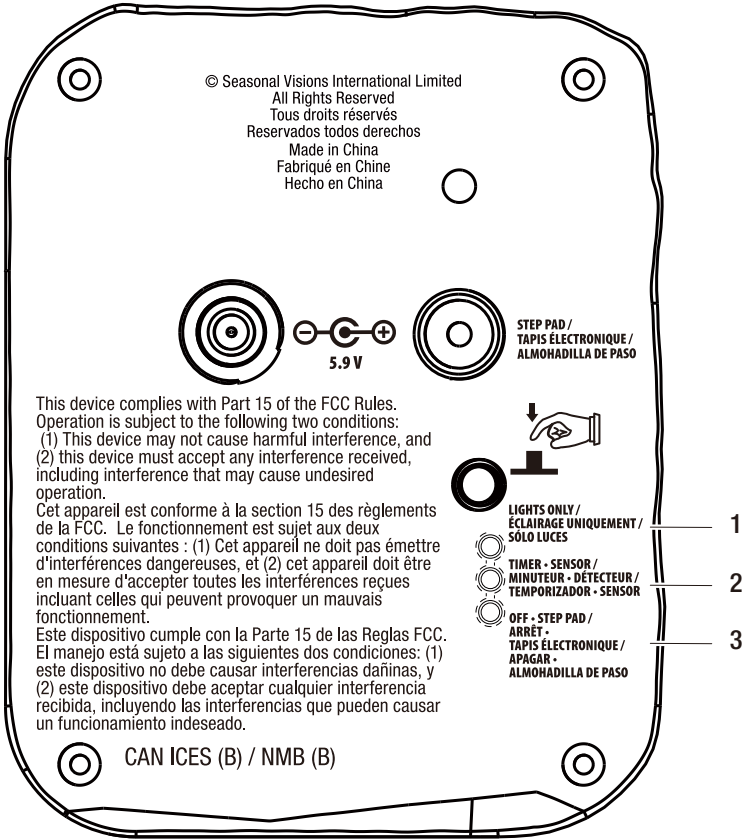

WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

- 1. Please use the adapter supplied by manufacturer.
 - 2. Please assemble item according to instructions. Connect all wires according to matching color.
 - 3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep flammables away from the adapter, as it heats up during operation.
- Please view all instructions carefully before assembling. Save this instruction sheet for future reference.

- ☐ Lay product down before a storm or strong winds.
- ☐ Don't climb or pull on product.
- ☐ Do not add to or modify unless accessory is designed for product
- ☐ Assemble and place the product on level surfaces only.
- ☐ Don't push or tilt product.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).Operation is subject to the following two conditions:

- 1. This device may not cause interference.
- 2. This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES (B) / NMB (B)

1



WE SUGGEST AT LEAST TWO ADULTS FOR ASSEMBLY

2




NO MOVING AFTER FULLY ASSEMBLED

3



LEVEL AREA ONLY

7

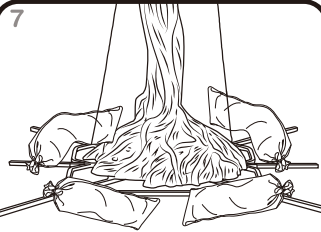

USE WEIGHTS ON THE BASE

8



USE INCLUDED ADAPTER ONLY

9



DO NOT DISPLAY DURING STRONG WINDS

4



DO NOT PUSH OR TILT

5



DO NOT CLIMB OR PULL ON

6



DO NOT ADD TO OR MODIFY

10



CAUTION DAMAGE COULD OCCUR IN HIGH WINDS

11

CONTACT US

IF EYES, MOUTH, CHEST LIGHTS DON'T WORK

 


12



CONTACT US

1-855-434-6543
(1-855-HDHoliday)



FAQ:

Why are the eyes of my 15ft Worricrow not working or do not light up?

- Check and ensure that all cables are connected to their corresponding cable as shown in the instruction sheet (See steps 5.2, 6.1, 7.2, 8.1 and 12)

My item does not activate or turn ON?

- Check that the adapter is properly connected with the threaded cap fully tightened to your 15ft Worricrow and is plugged into a live outlet. (See step 15.2)
- Check and ensure that there is power to your 15ft Worricrow by checking for the red indicator light on the control panel. If there is power, a red indicator light will light up on the control box. If the red light indicator is set to "OFF", please change it to "ON" or "TIMER."

If all the information above does not solve your issue, please contact our SVI customer service experience team email (customerservice@svius.com) or call Home Accents Holiday Customer Service Hotline 1-855-HD-HOLIDAY (1-855-434-8543).

Questions, problems, missing parts? Before returning to the store, Please have a copy of your receipt ready and email the SVI customer experience team (customerservice@svius.com) within 90 days of the date of purchase or call Home Accents Holiday Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HOLIDAY (1-855-434-6543)
HOMEDEPOT.COM