


9.5ft Long Gruesome Grounds GIANT-SIZED LED Arachnophobia Spider

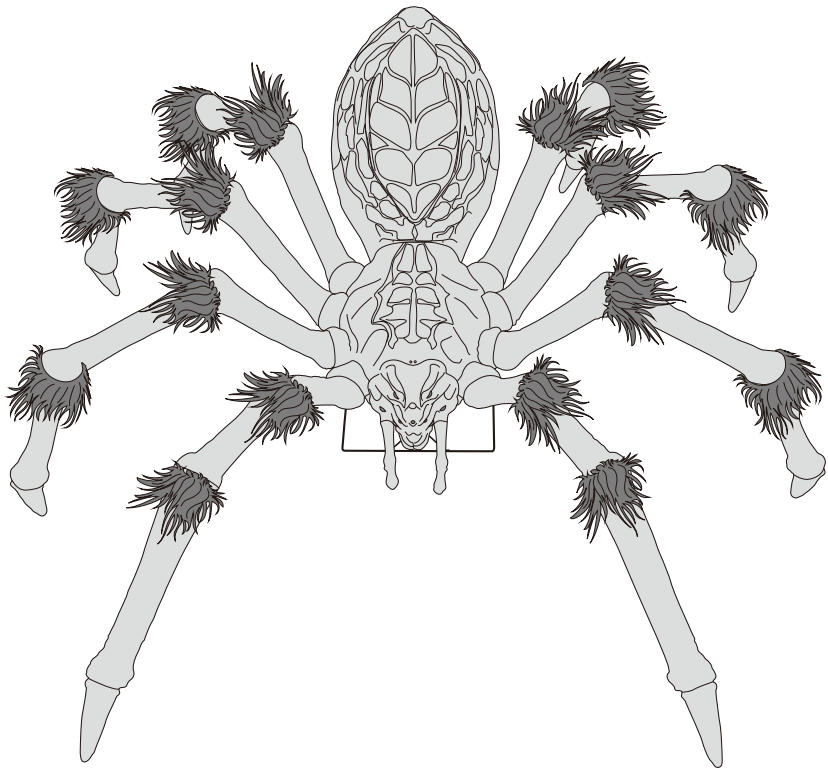

**ASSEMBLY REQUIRES AT LEAST 2 ADULTS, 2 ADULTS ARE RECOMMENDED.
PLEASE FOLLOW THE STEP BY STEP GUIDE AND ENJOY YOUR PROP!**

Questions, problems, missing parts? Before returning to the store, Please have a copy of your receipt ready and email the SVI customer experience team (customerservice@svius.com) within 90 days of the date of purchase or call Home Accents Holiday Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday


1-855-HD-HOLIDAY (1-855-434-6543)

HOMEDEPOT.COM

PARTS LIST

- A. Head x 1
- B. Abdomen x 1
- C. Cap x 1
- D. Front First Left Leg Segment x 1
- E. Front First Right Leg Segment x 1
- F. First Left Leg Segments x 3
- G. First Right Leg Segments x 3
- H. Support Poles x 2
- I. Base x 1
- J. Second Left Leg Segments x 4
- K. Second Right Leg Segments x 4
- L. Third Left Leg Segments x 4
- M. Third Right Leg Segments x 4
- N. Mandibles x 2
- O. Fur Covers x 16
- P. Stakes x 4
- Q. Small Parts Bag x 1
- R. Adapter x 1


Power Adapter * Spec
Input: 120V~50/60Hz
Output: 5.9V $\equiv$ 2.0A
Wattage: 11.8W

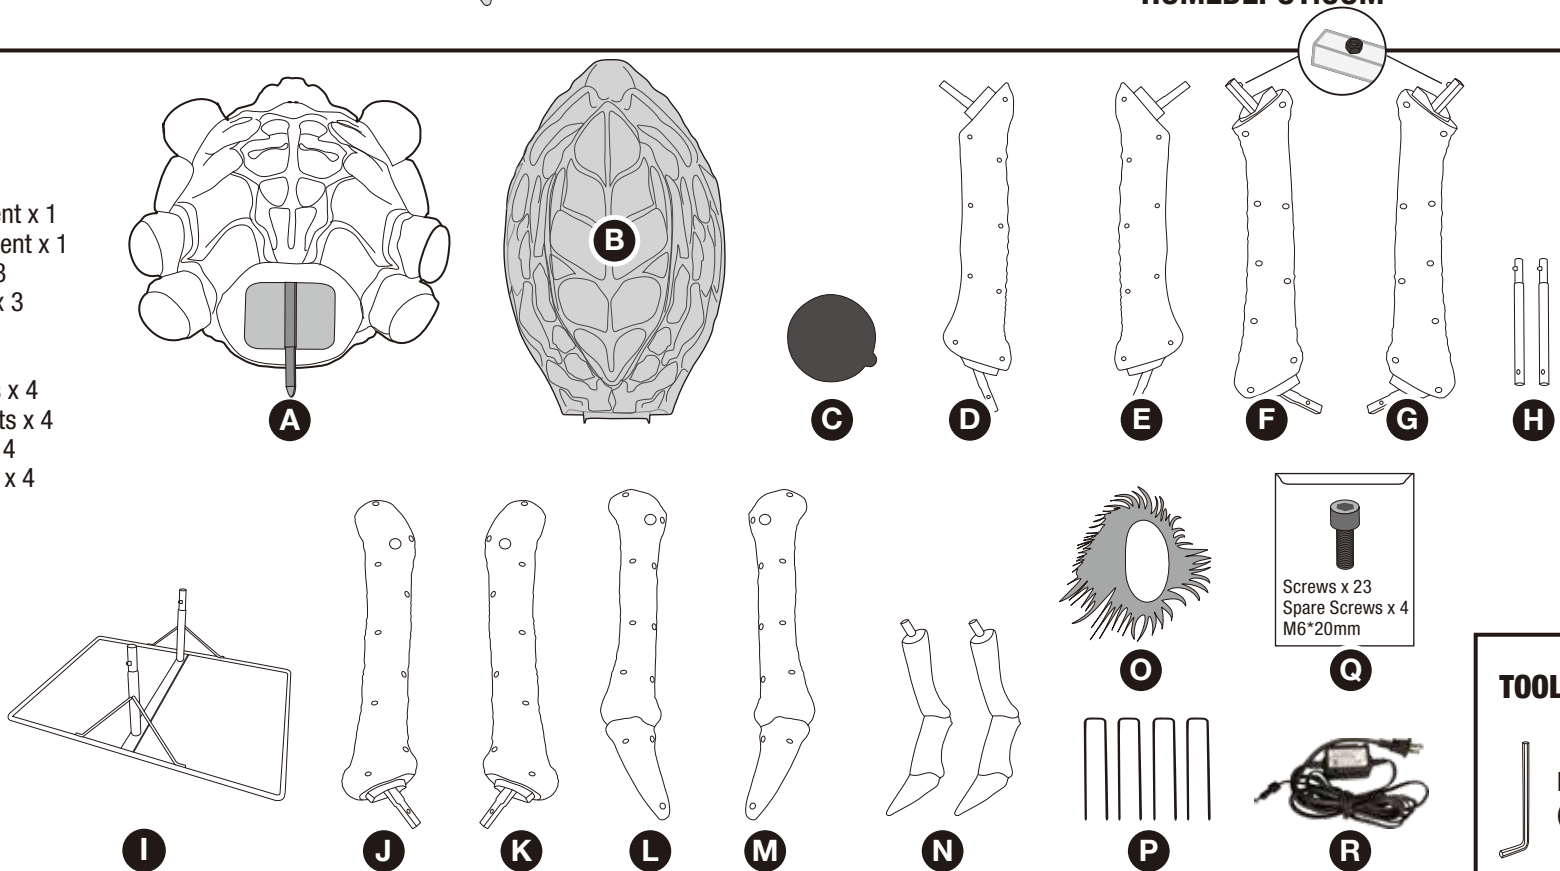





Screws x 23
Spare Screws x 4
M6*20mm

TOOLS REQUIRED

M5 hex wrench
(included)



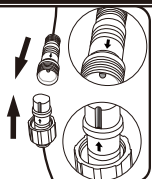


NOTE: When connecting cables, ensure that the arrow indicators on each cable end are lined up with and pointing at each other. There is also a groove and a rod like protrusion by these arrows that fit into each other. Then firmly press the cables together. Rotate the cable cap clockwise onto the threading of the corresponding cable until firmly in place.

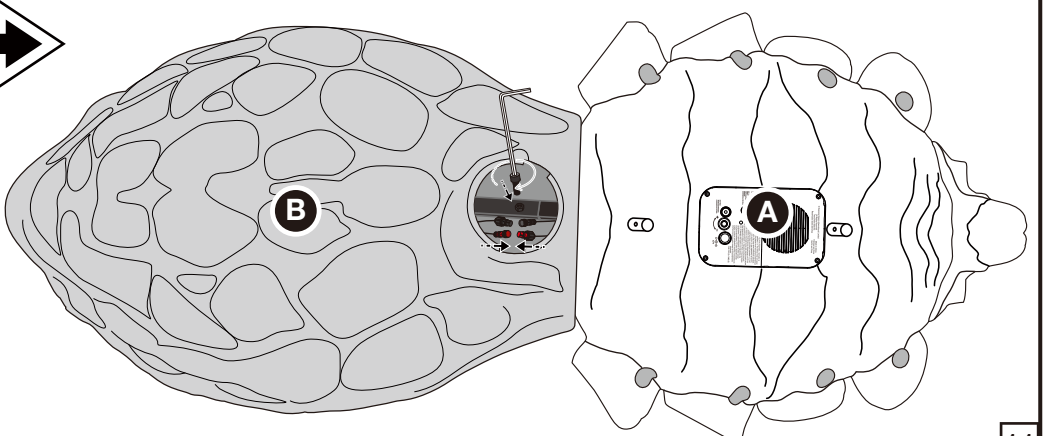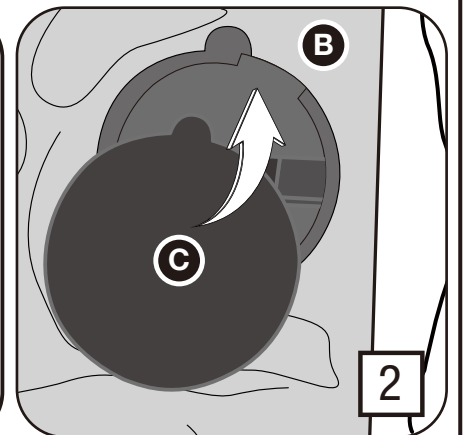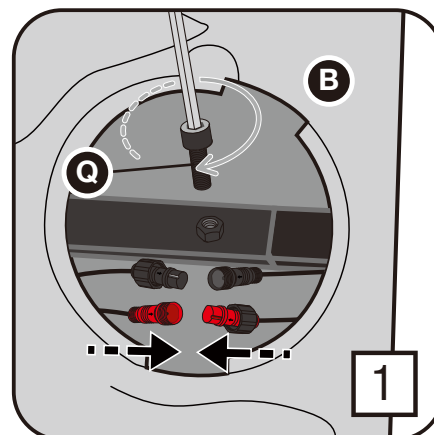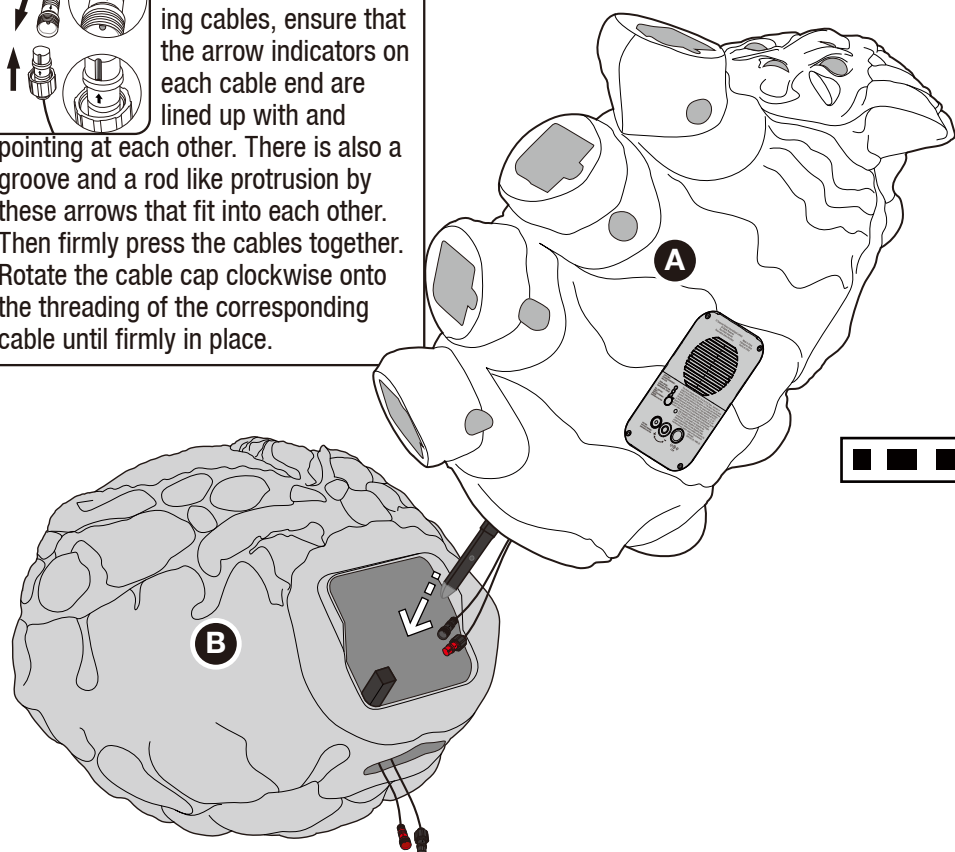


1.1

NOTE: Before adding the Front First Leg Segments (D, E), install the screws into the screw housings in the leg openings at the front of the Head (A) by rotating them in place 2-3 times. This way, the legs can be installed easily while the screws are in place. Have someone or something hold the head up to make installing the Front Leg Segments (D,E) easier.

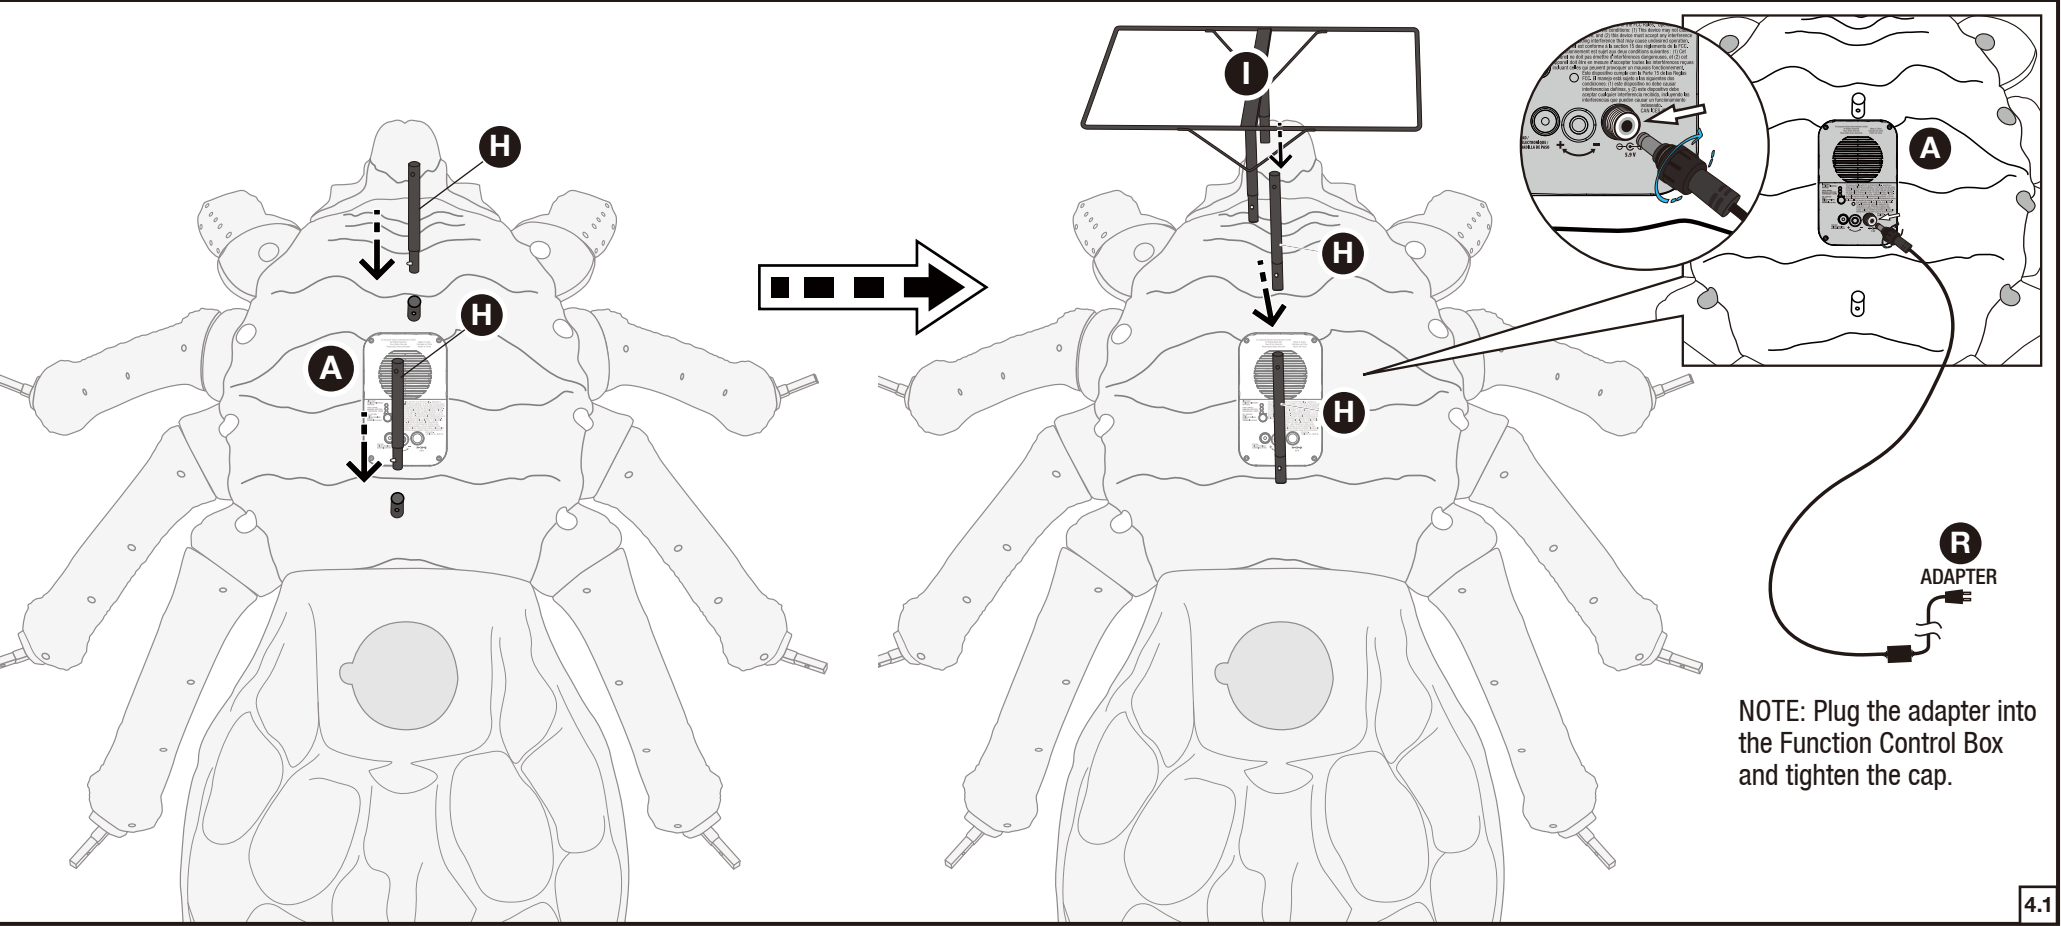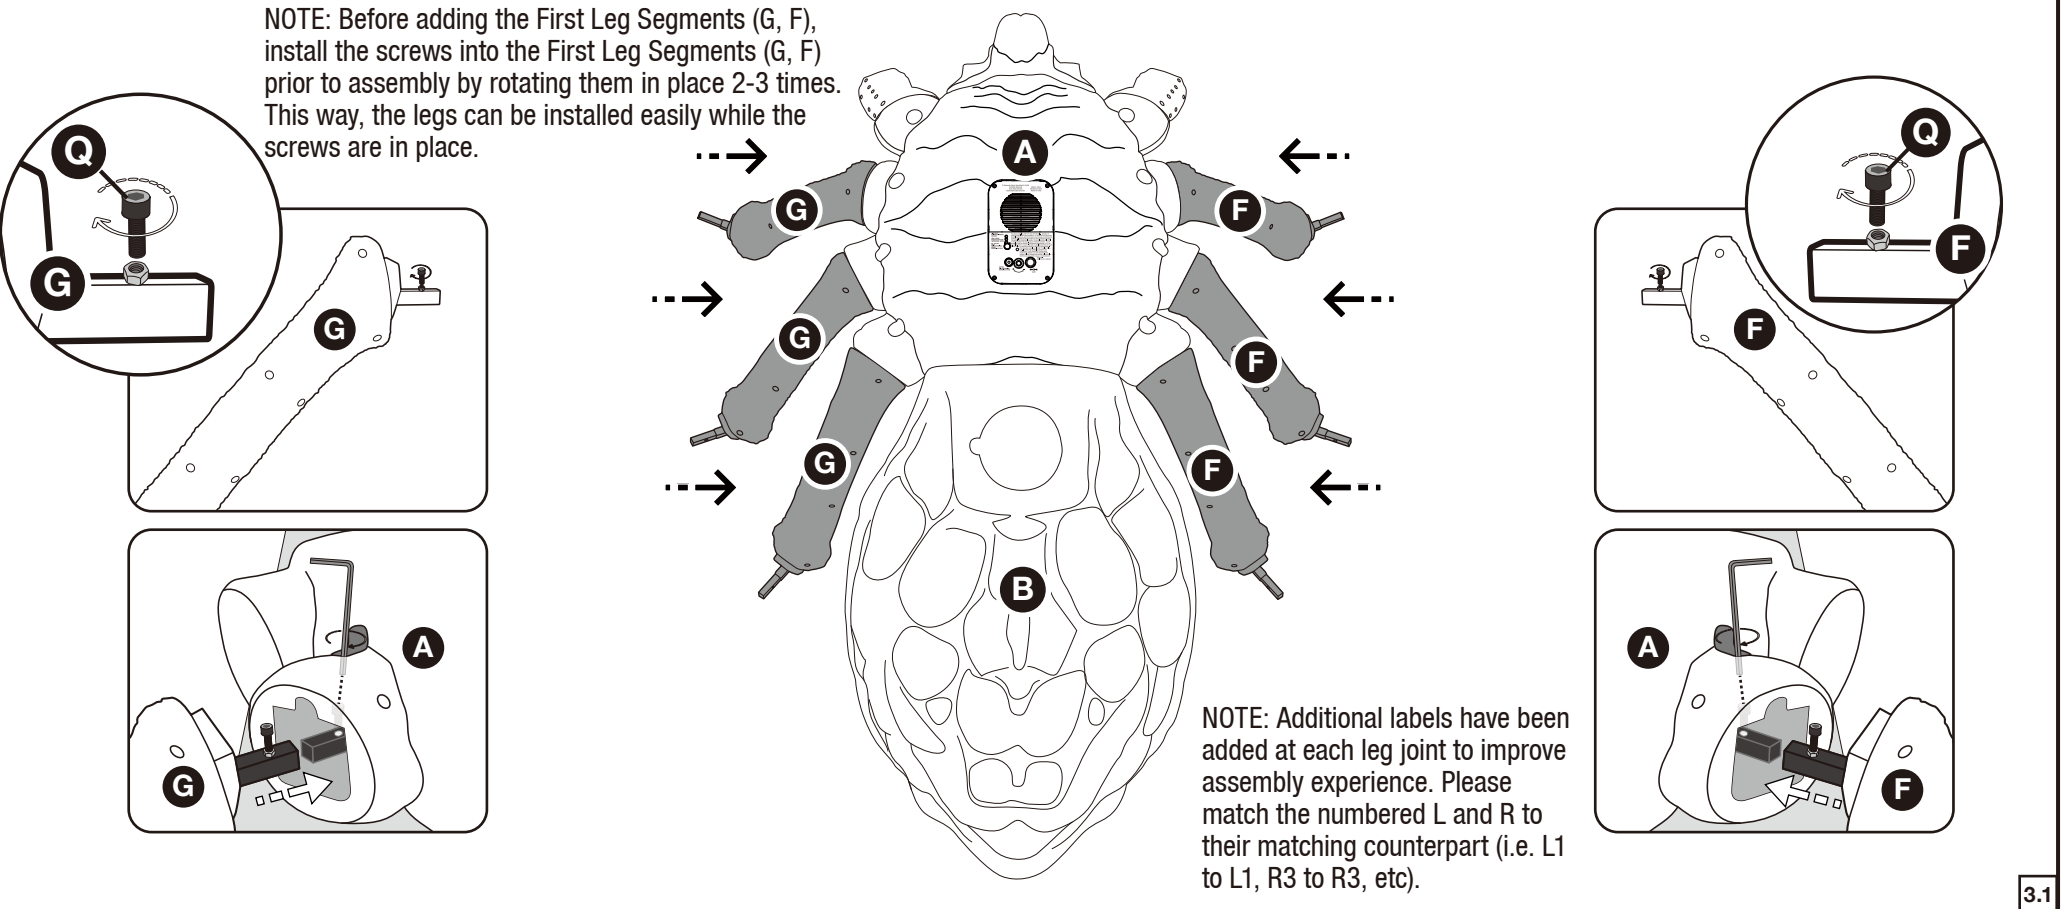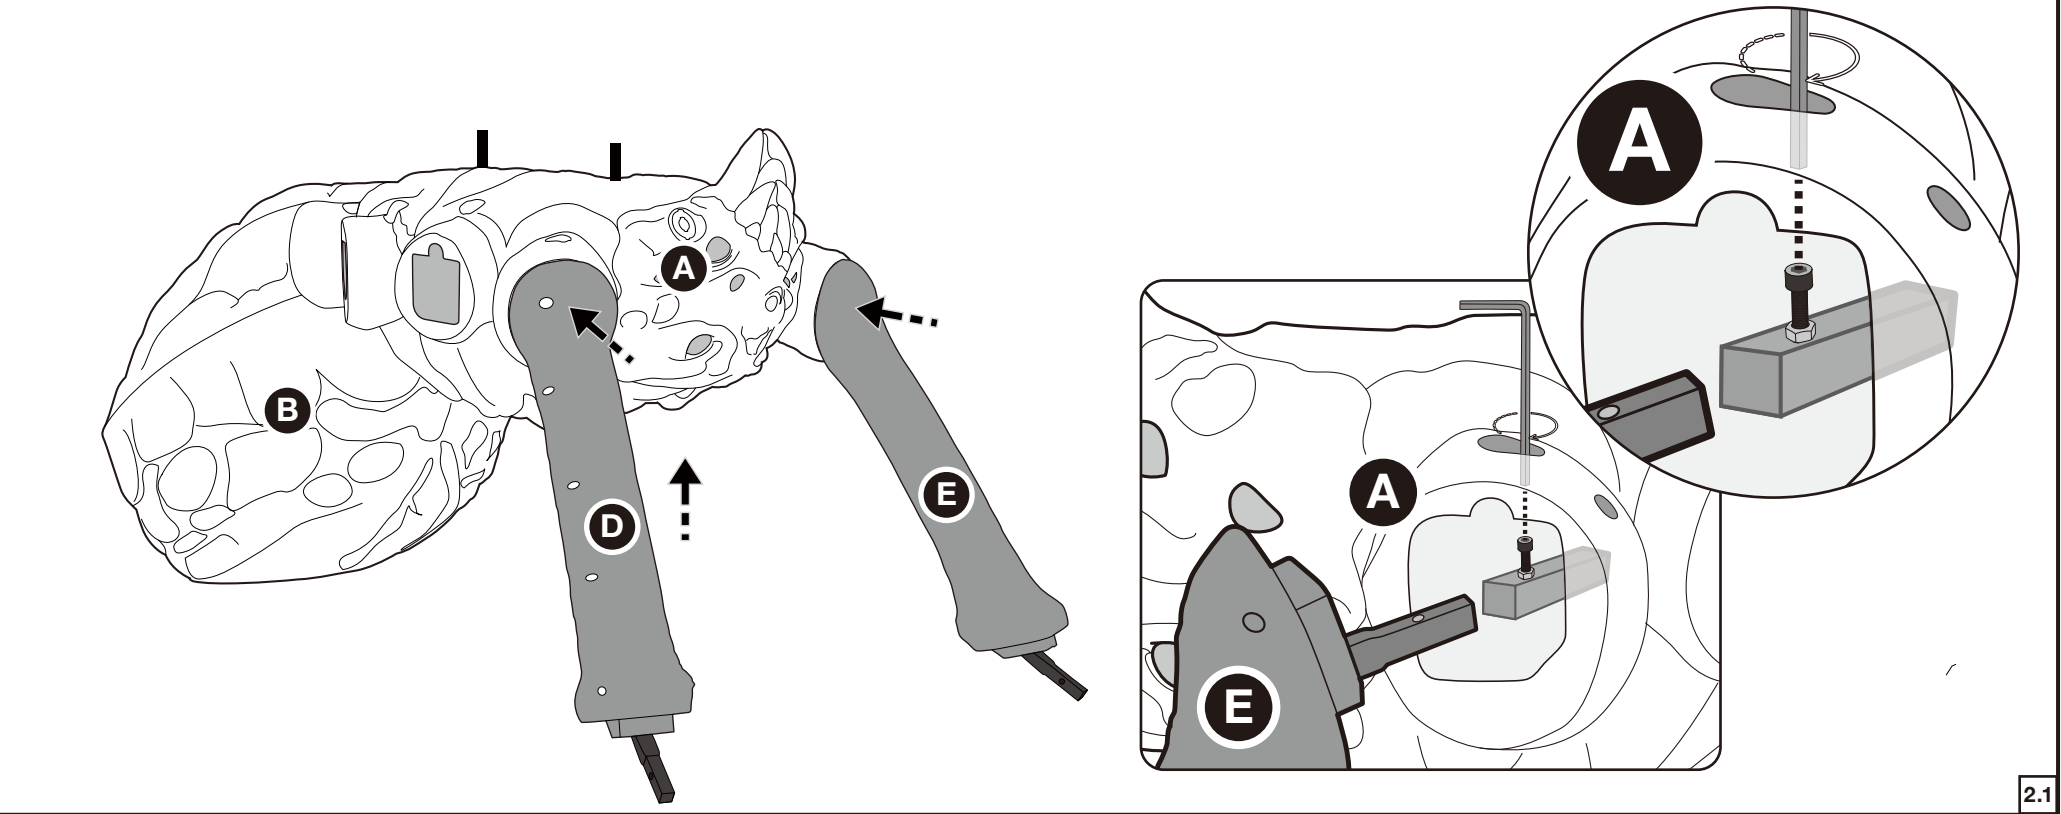


Note: Assemble the Second Leg Segments (J, K) and the Third Leg Segments (L, M) before assembling to the spider for ease of assembly.

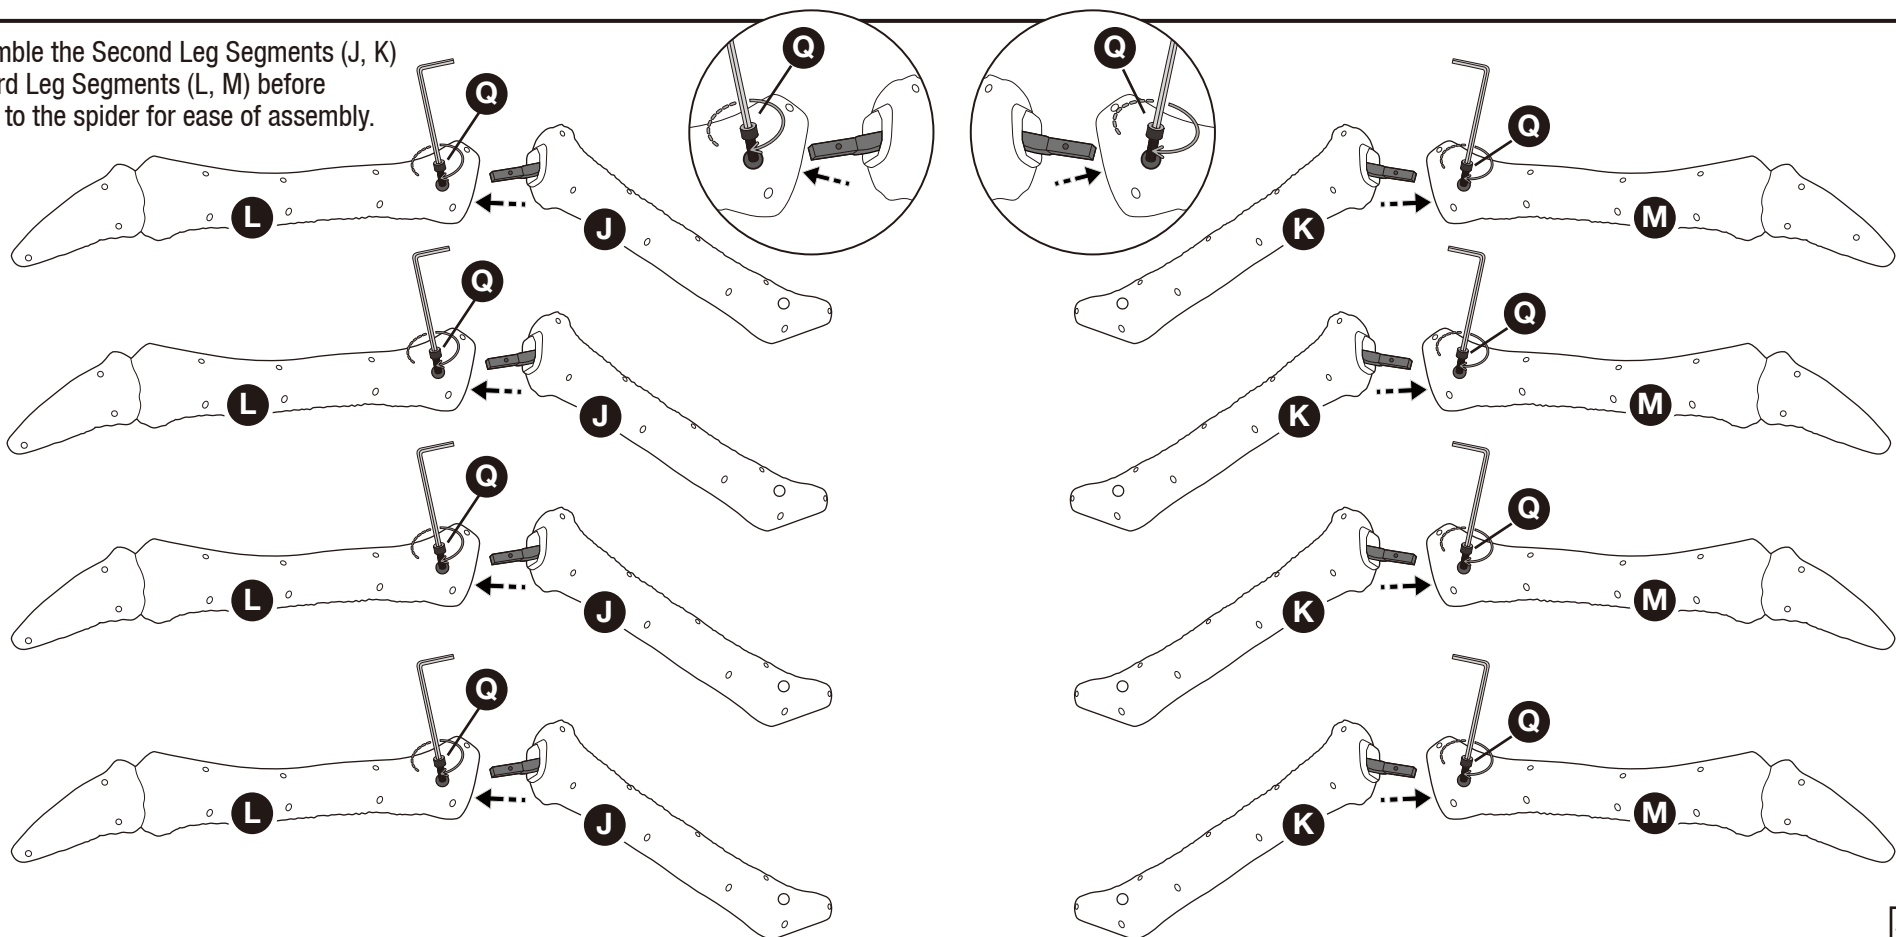


5.1

Note: Carefully rotate the spider body onto the frame.

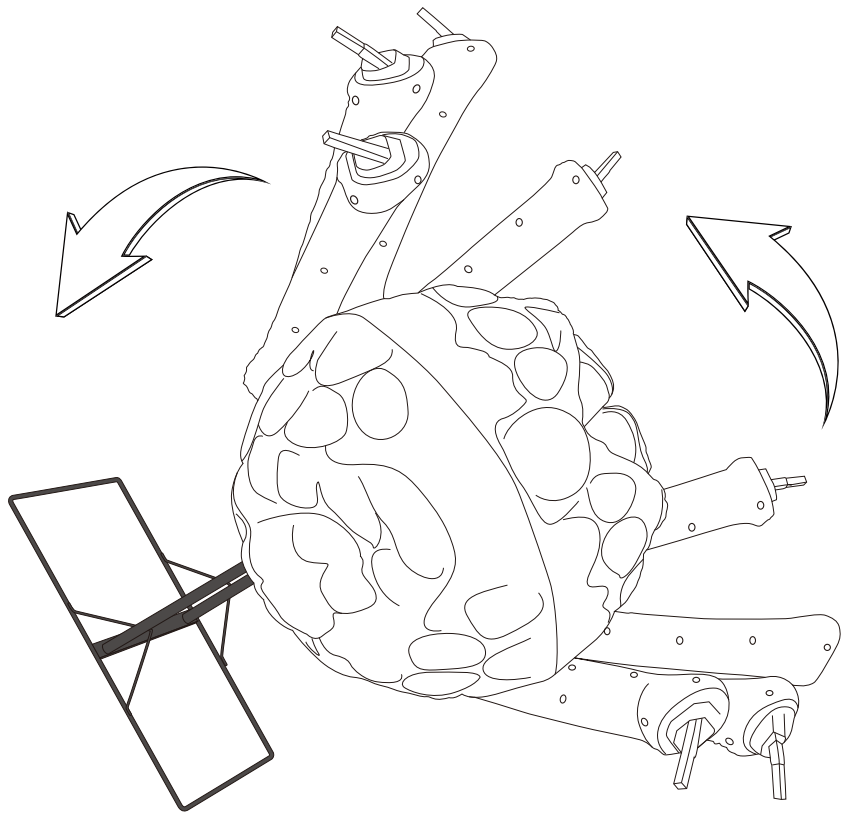


6.1


Note: Assemble the front legs first to make the assembly more balanced.

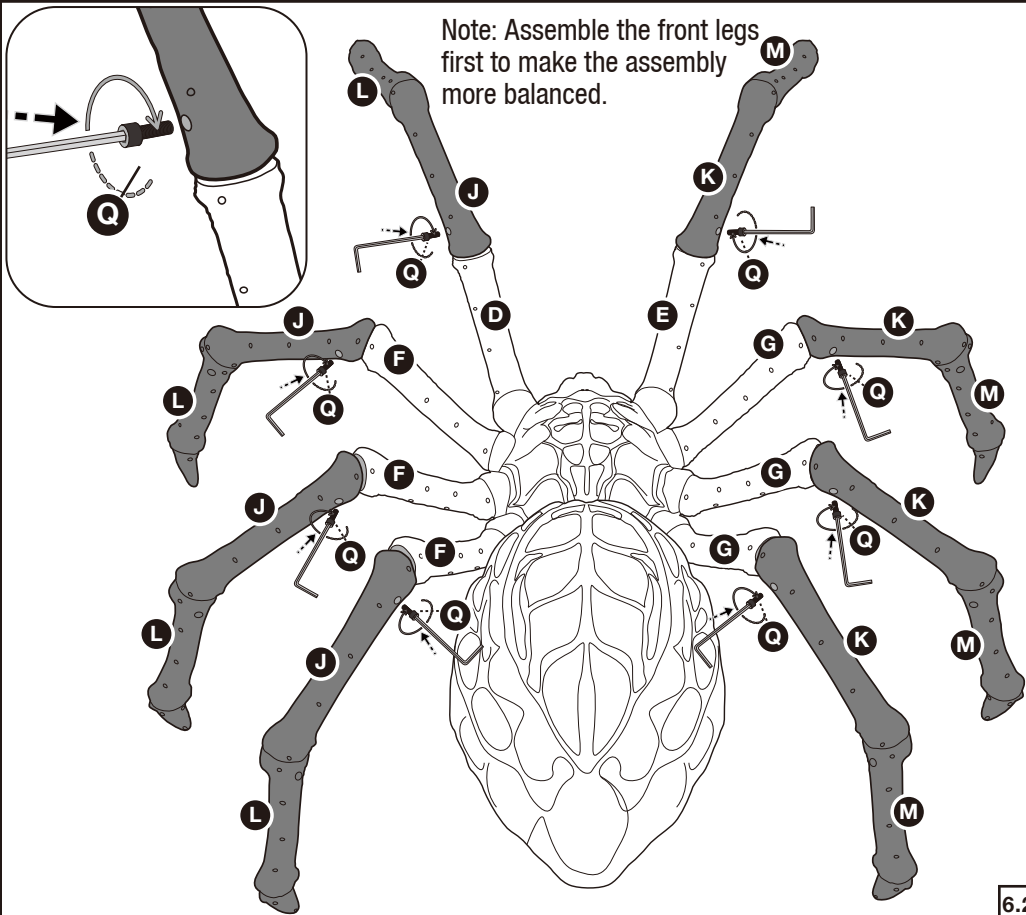

6.2


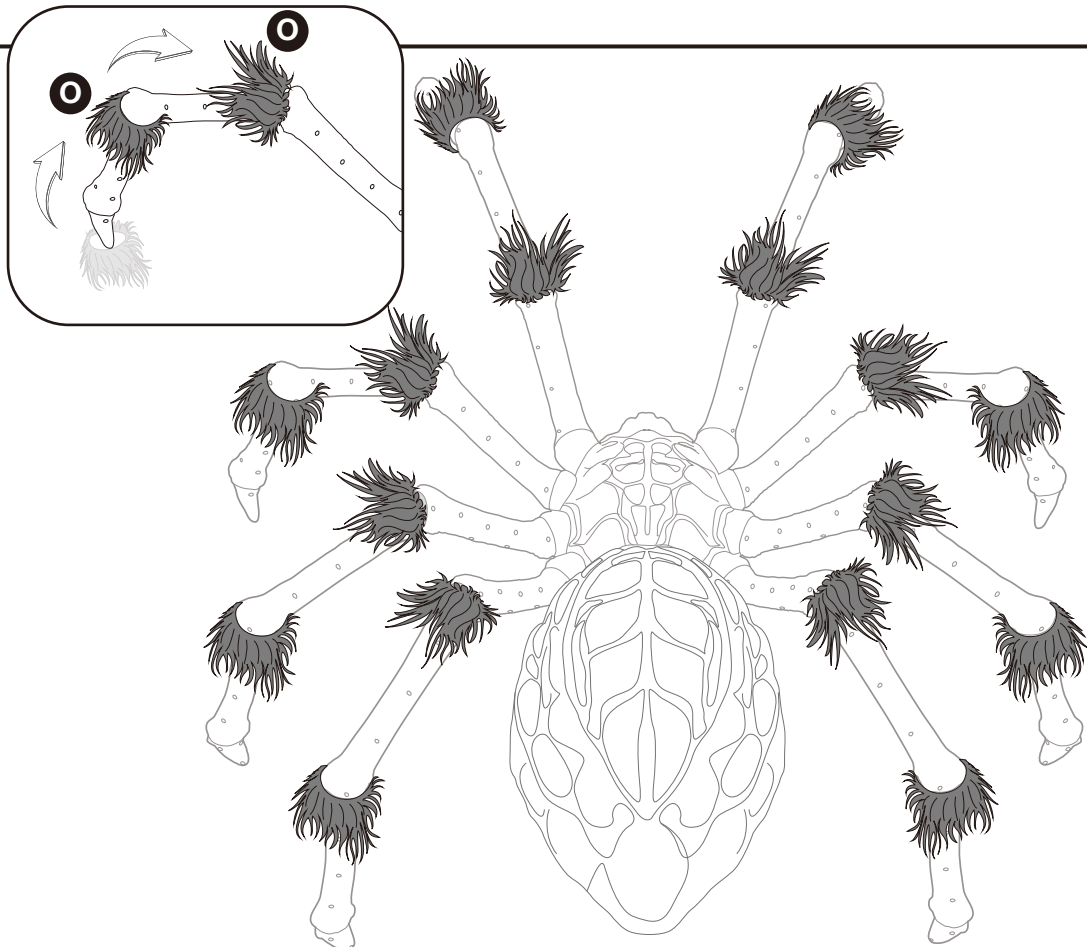


7.1

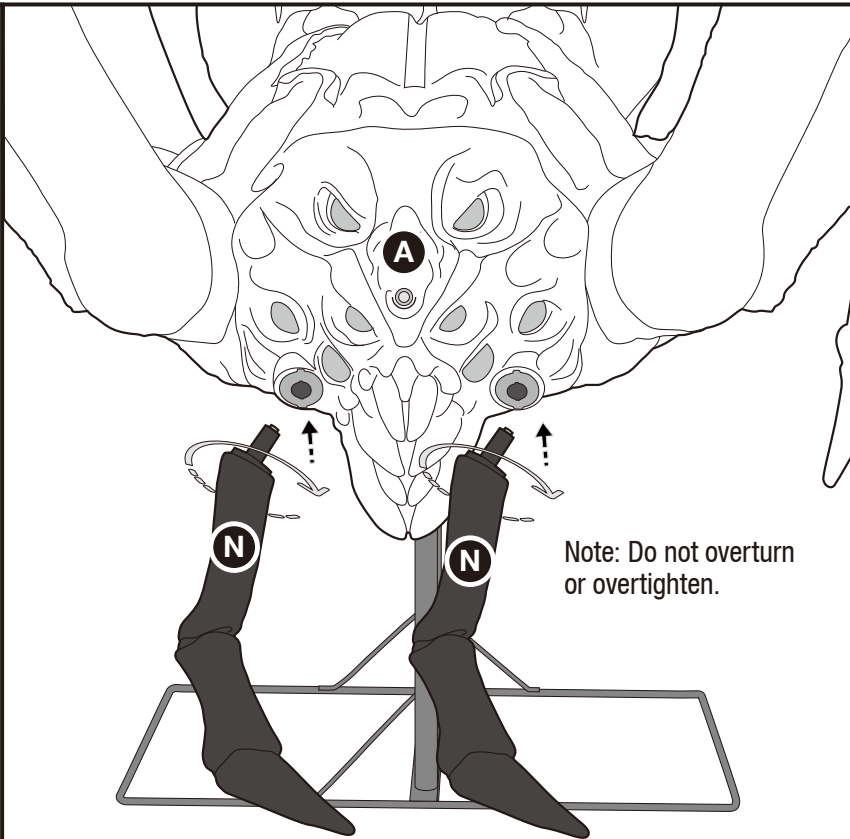

Note: Install the Mandible (N) on the right side of the spider first.

7.2

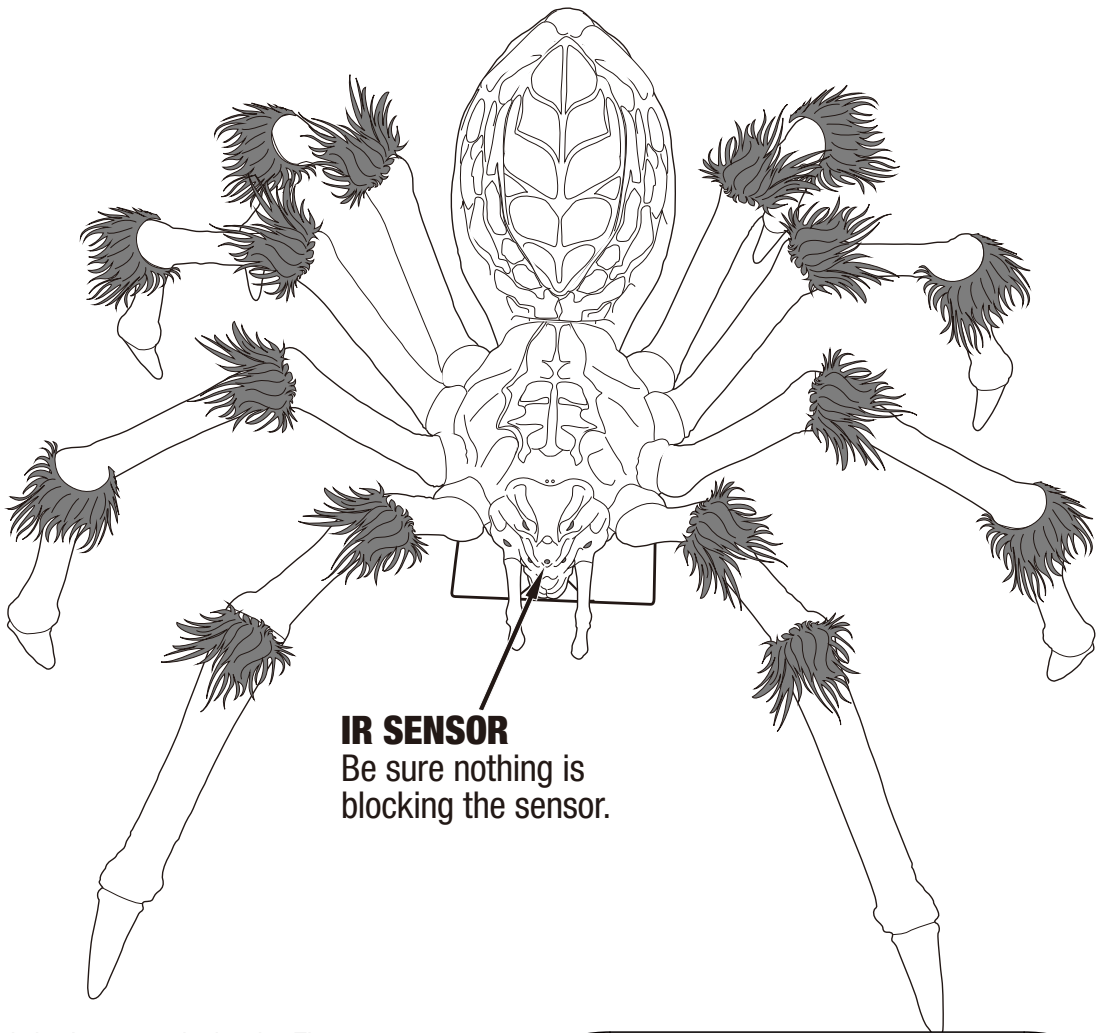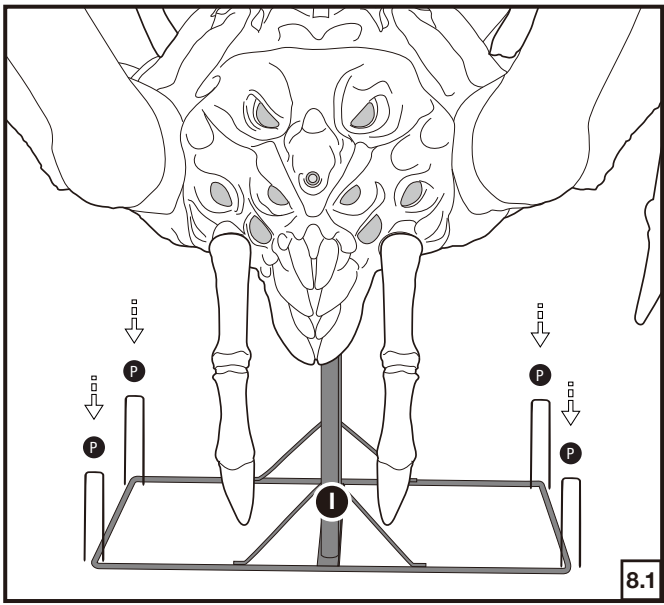

IR SENSOR
Be sure nothing is blocking the sensor.

OPERATION INSTRUCTIONS - CONTROL BOX:

Insert the Adapter (R) into the adapter receiver in the function control box and plug into a standard outlet. The control box is located under the prop. The function can be toggled between ON, TIMER * SENSOR, and OFF * STEP PAD using the button on the function control box.

LIGHTS ONLY / ÉCLAIRAGE UNIQUEMENT / SÓLO LUCES	This switch mode will activate only the LED eyes and lights of the item indefinitely until the switch mode is changed from the lights only setting.
TIMER • SENSOR / MINUTEUR • DÉTECTEUR / TEMPORIZADOR • SENSOR	This switch mode will activate SENSOR mode for 6 hours followed by a deactivated period of 18 hours. This cycle will continue indefinitely unless the setting is changed. During the 6-hour active period, the Infra-red (IR) sensor can be triggered. If the Infra-red (IR) sensor is activated, the prop will activate for one activity cycle (sound). The infra-red (IR) sensor has a range of up to 4 m/13 ft and will activate when someone comes within an 80-degree angle from left to right as well as from above or below.
OFF • STEP PAD / ARRÊT • TAPIS ÉLECTRONIQUE / APAGAR • ALMOHADILLA DE PASO	This switch mode allows the item to be activated only if triggered by using a Step Pad or Try Me Button (Not Included). The item will operate for one activity cycle with each Step Pad or Try Me activation. Otherwise, the item will stay off.
	Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off .

WARNING


This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires according to matching color.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep flammables away from the adapter, as it heats up during operation.

Please view all instructions carefully before assembling. Save this instruction sheet for future reference.

CARE AND STORAGE INSTRUCTIONS

When not in use, store this product in its original packing. Keep away from heat and moisture.

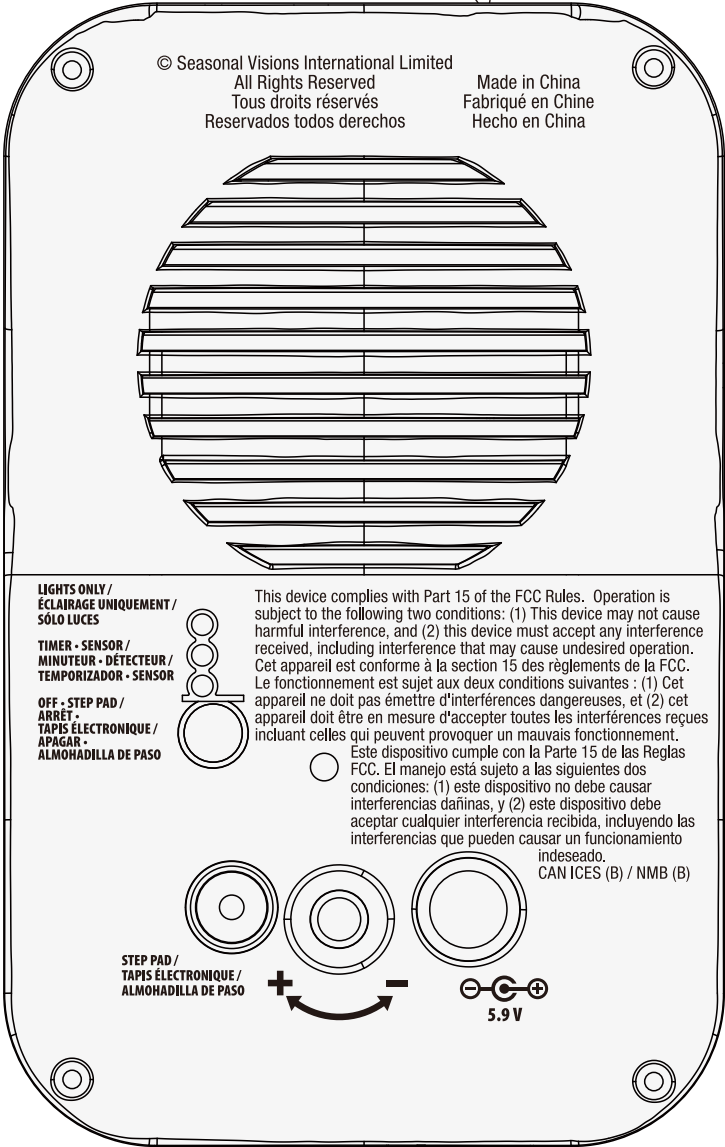

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

CAN ICES (B) / NMB (B)

IMPORTANT TIPS:

- Ensure that the item's adapter is plugged in at the Function Control Box and in the wall.
- Ensure that the switch on the function control box is on the desired setting.
- If not functioning properly (ex: lights don't activate), ensure that cables are connected to their corresponding cable as shown in the instruction sheet.
- Ensure that the floor or surface that the item sits on is flat and level.
- Ensure that the volume is not all the way down.
- Be sure nothing is blocking the sensor.

Questions, problems, missing parts? Before returning to the store, please have a copy of your receipt ready and email the SVI customer experience team (customerservice@svius.com) within 90 days of the date of purchase or call Home Accents Holiday Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HOLIDAY (1-855-434-6543)
HOMEDEPOT.COM