


USE AND CARE GUIDE

8.5 FT. KNIGHT DULLAHAN

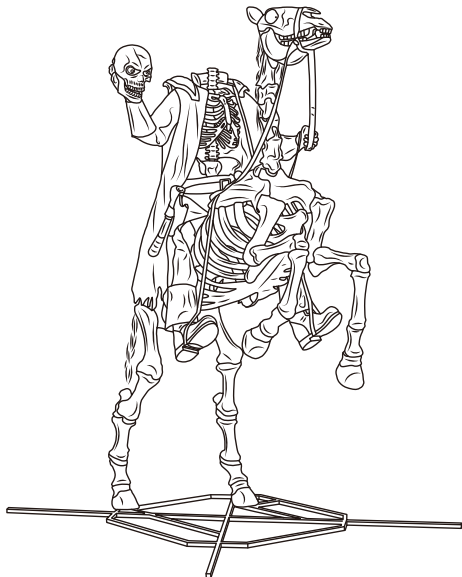

Questions, problems, missing parts? Before returning to the store, please have a copy of your receipt ready and email the SVI customer experience team (customerservice@svius.com) within 90 days of the date of purchase or call Home Accents Holiday Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HOLIDAY (1-855-434-6543)
HOMEDEPOT.COM



Video assembly
instructions
available online


ASSEMBLY REQUIRES AT LEAST 2 ADULTS, 3 ADULTS ARE RECOMMENDED. PLEASE FOLLOW THE STEP BY STEP GUIDE AND ENJOY YOUR 8.5 FT. KNIGHT DULLAHAN!

IMPORTANT TIPS:

- Ensure that item's adapter is plugged in with the screw cap tightened at the Function Control Box and plugged in the wall.
- Ensure that the switch on the function control box is on the desired setting.
- If not functioning properly (ex: eyes & body don't light up, head and arm don't move), ensure that cables are connected to their corresponding cable as shown in the instruction sheet.
- Be sure nothing is blocking movement or caught in moving parts.
- Ensure that the floor or surface that the item sits on is flat and level.
- Ensure that the volume is not all the way down.
- Be sure nothing is blocking the sensor. Prop only speaks on SENSOR mode, TIMER mode, and when Step Pad is pressed. See Operations Instructions page 5 for complete details.


PARTS LIST

- A. Base x 1
- B. Left Lower Leg x 1
- C. Right Lower Leg x 1
- D. Horse Pelvis x 1
- E. Lower Spine x 1
- F. Horse Ribcage x 1
- G. Rider Pants x 1
- H. Rider Body with Box x 1
- I. Rider Jacket x 1
- J. Left Arm x 1
- K. Right Arm x 1
- L. Left Hand x 1
- M. Right Hand with Rider Head x 1
- N. Horse Neck x 1
- O. Horse Head x 1
- P. Reins
- Q. Left Leg with Foam x 1
- R. Right Leg Frame x 1
- S. Boots x 2
- T. Right Leg x 1
- U. Belt x 1
- V. Axe x 1
- W. Stirrup x 1
- X. Horse Left Foreleg x 1
- Y. Horse Right Foreleg x 1
- Z. Horse Tail x 1
- Z1. Base Extenders x 4
- Z2. Stakes x 4
- Z3. Small Parts Bag x 1
- Z4. Adapter * x 1
- Power Adapter * Spec
- Input: 120V~60Hz
- Output: 5.9V 3.0A
- Wattage: 17.7W

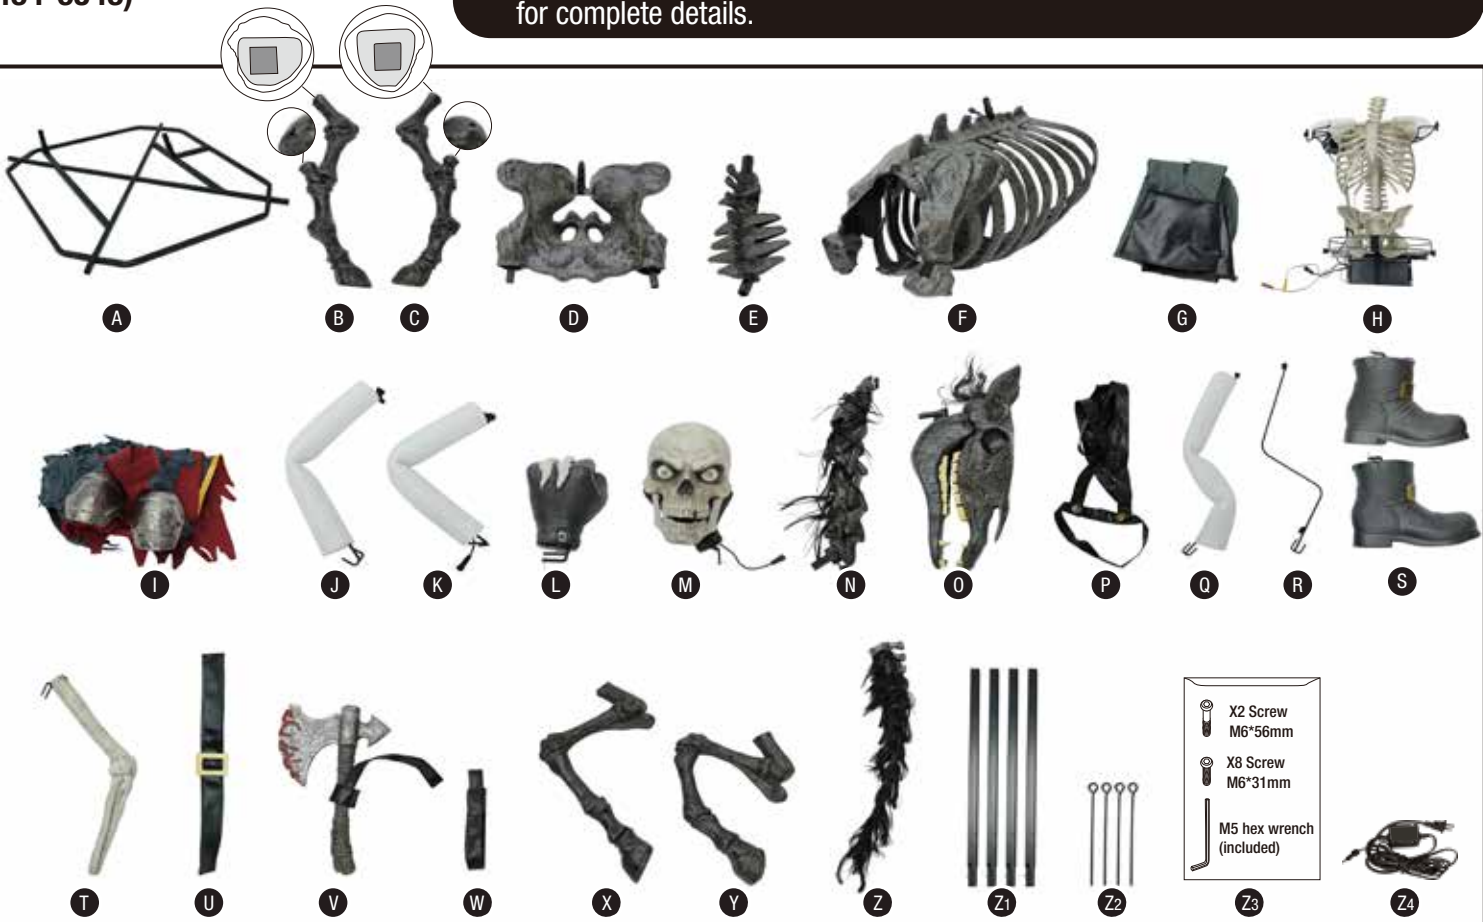


NOTE: Throughout the instructions, Right and Left are from the character's point of view.

M6*31mm

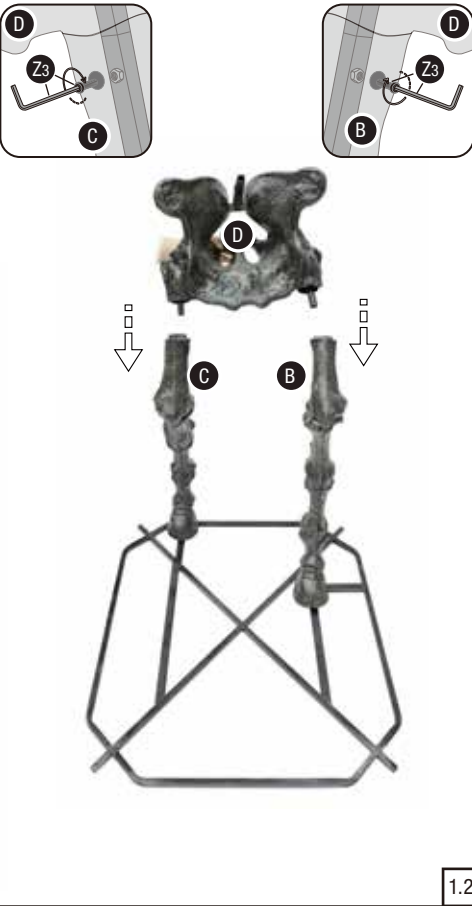

1.1

1.2

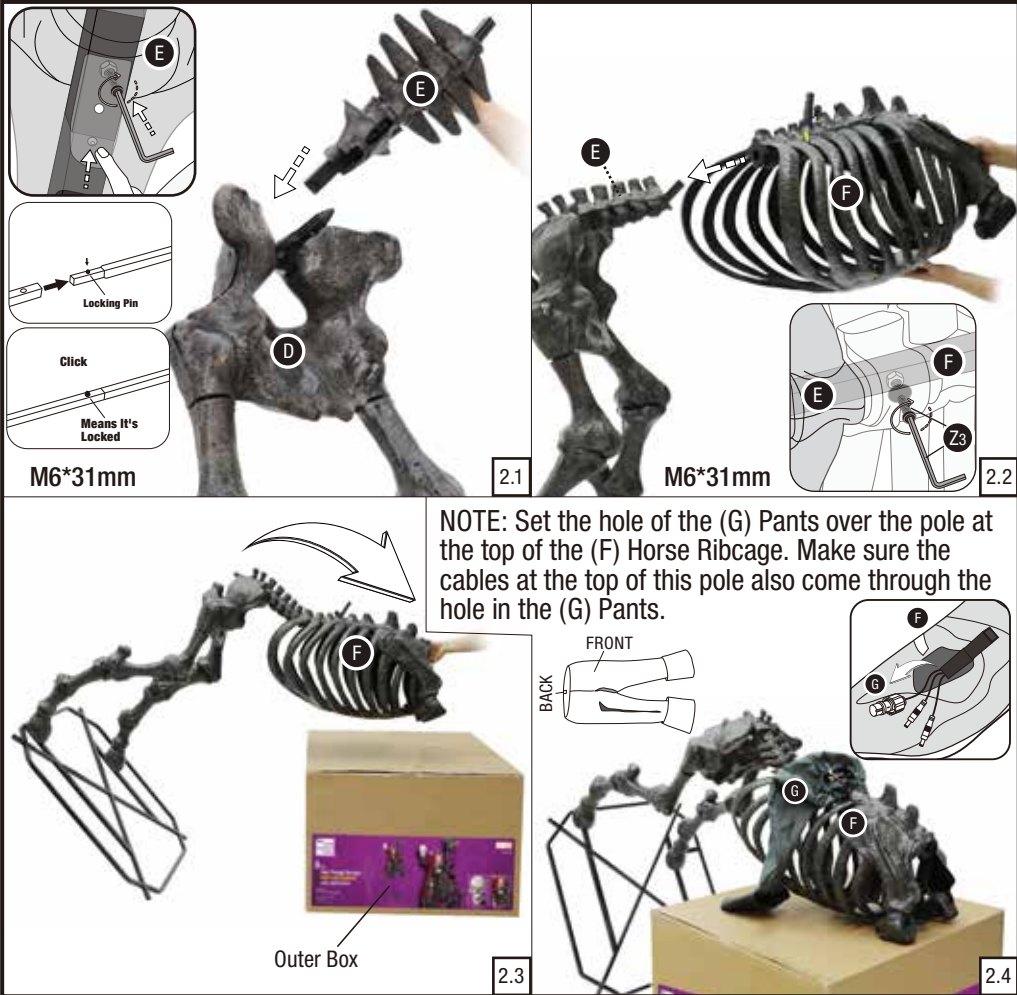

NOTE: Set the hole of the (G) Pants over the pole at the top of the (F) Horse Ribcage. Make sure the cables at the top of this pole also come through the hole in the (G) Pants.

Outer Box

Plug the adapter into the Function Control Box.

ADAPTER Z4

Cable pairs are color-coded to ensure proper color-matching connections.

NOTE: When connecting cables, ensure that the arrow indicators on each cable end are lined up with and pointing at each other. There is also a groove and a rod like protrusion by these arrows that fit into each other. Then firmly press the cables together. Rotate the cable cap clockwise onto the threading of the corresponding cable until firmly in place.

3.1

NOTE: Slide the (J) Left Arm into the left sleeve of the (I) Rider's Jacket from the inside. Then set the forked hook of the (J) Left Arm into the housing on the left side of the (H) Rider's Body with Box.

3.2

3.3

4.1

4.2

4.3

5.1







5.2


5.3

6.1

6.2

6.3

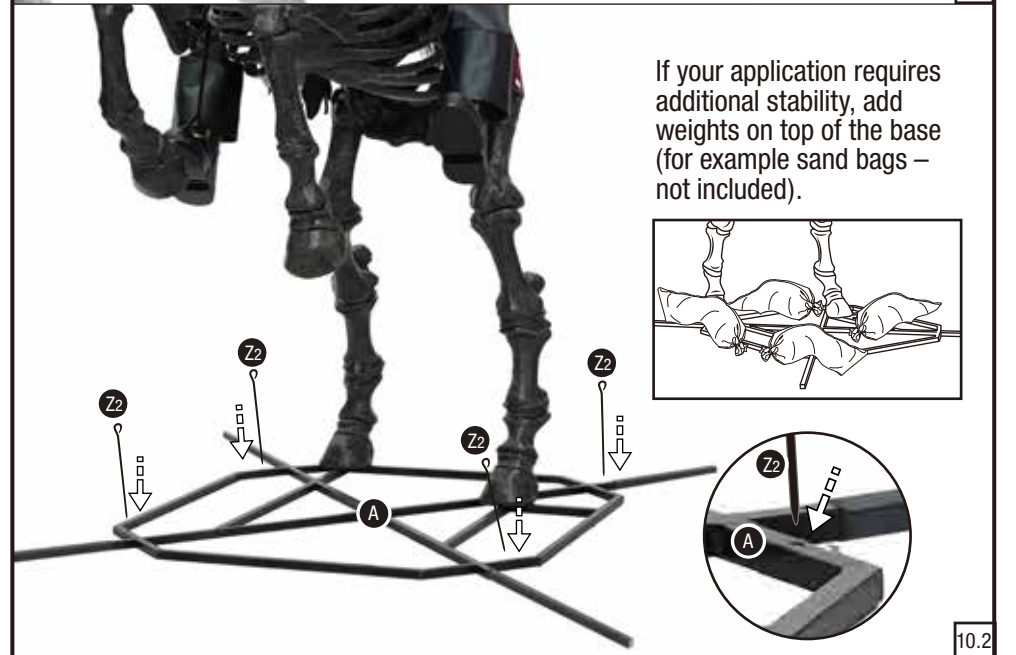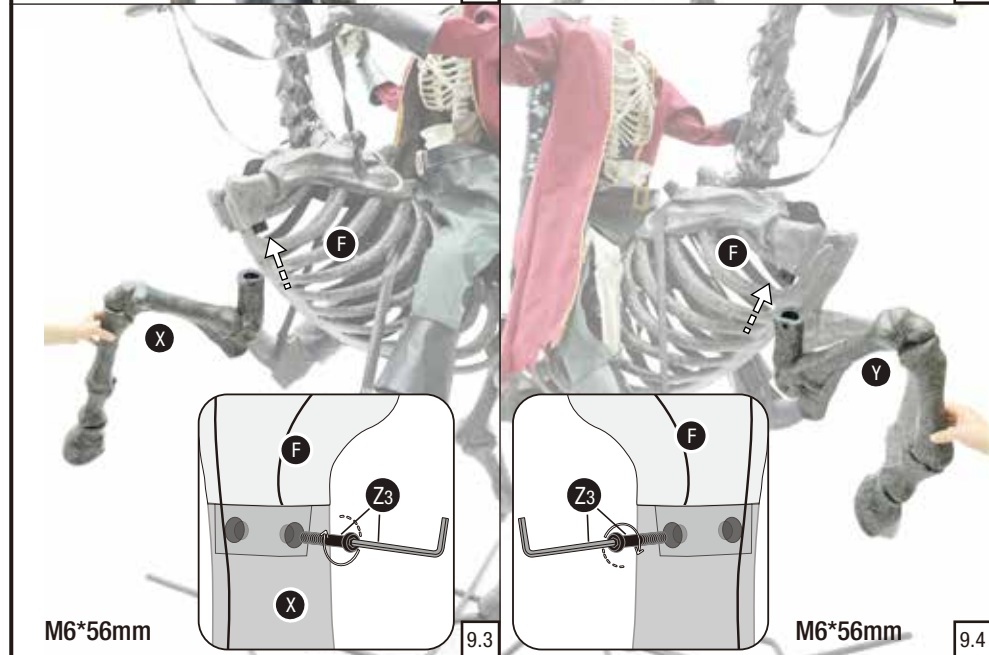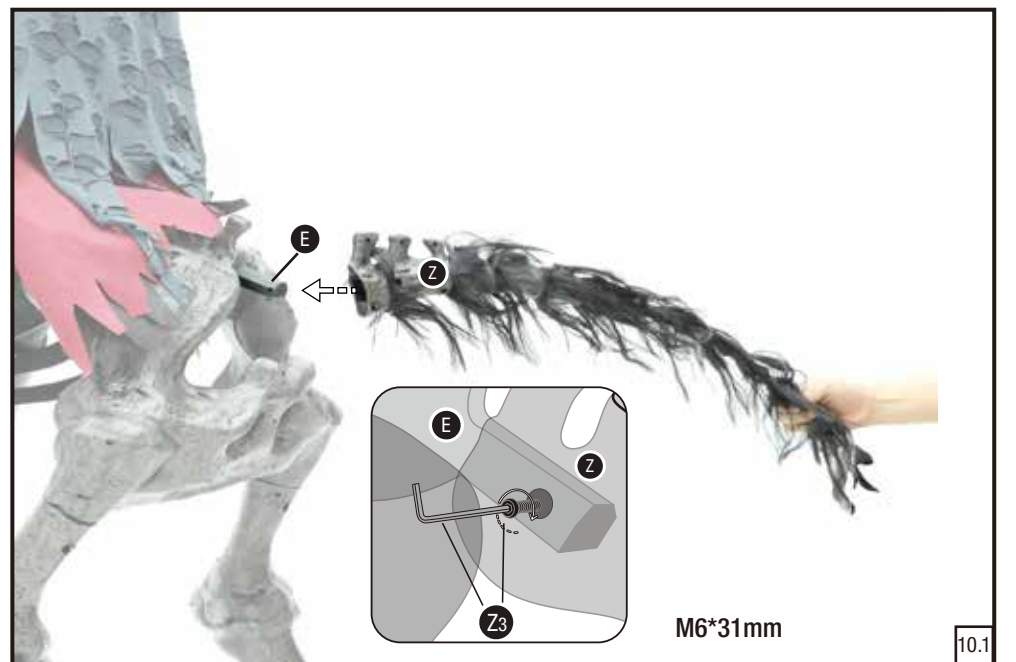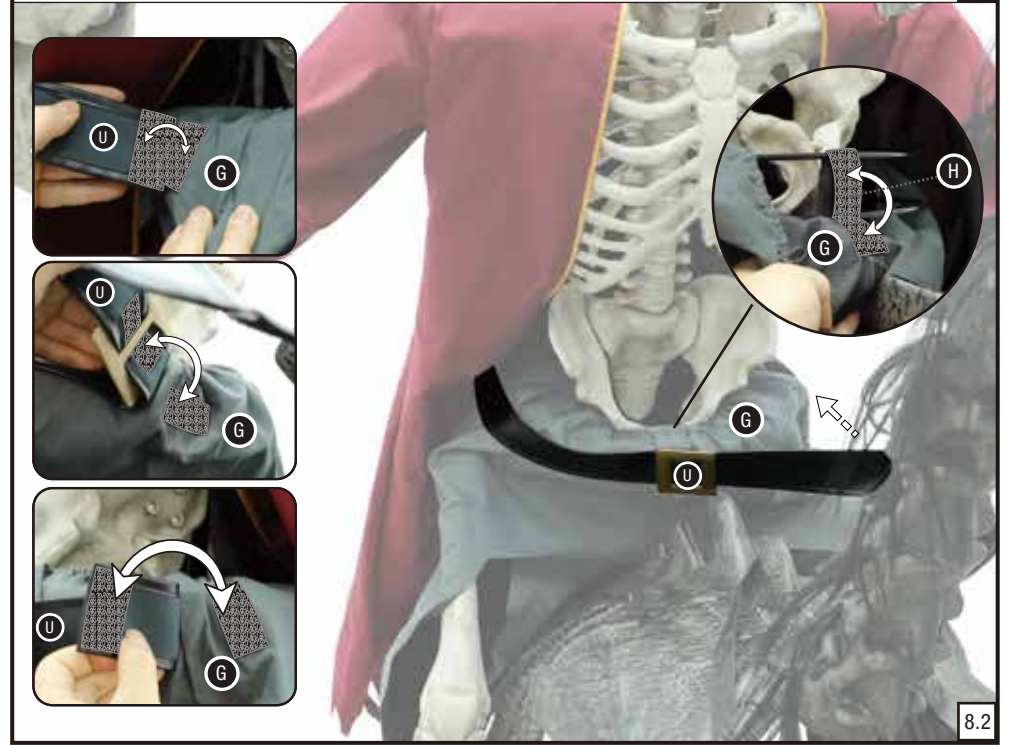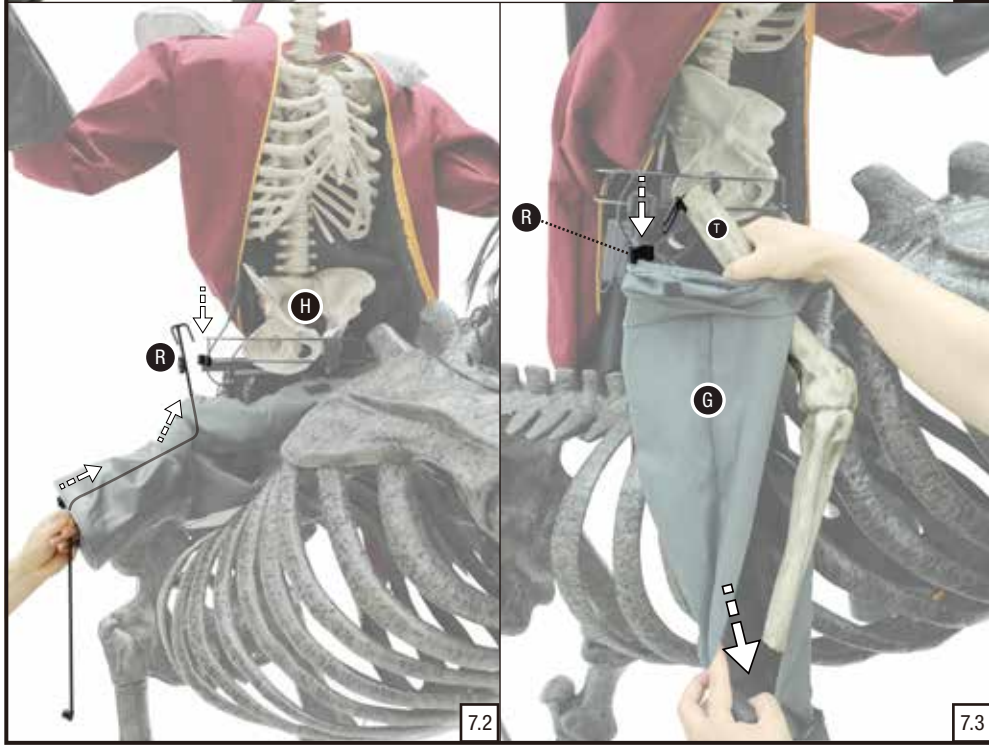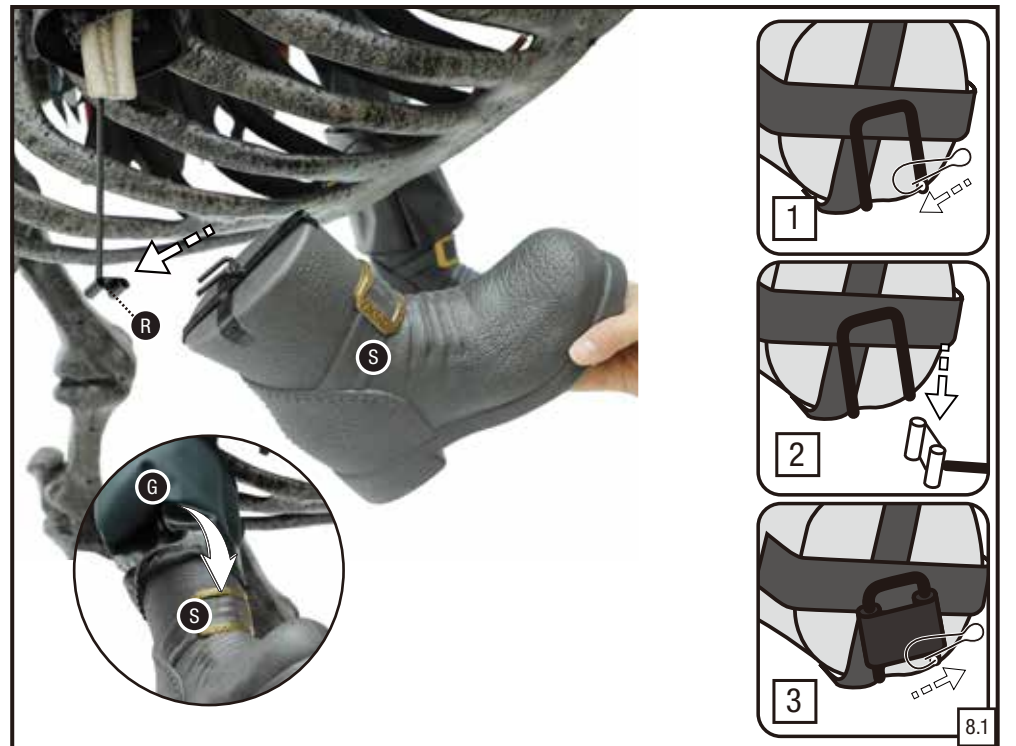

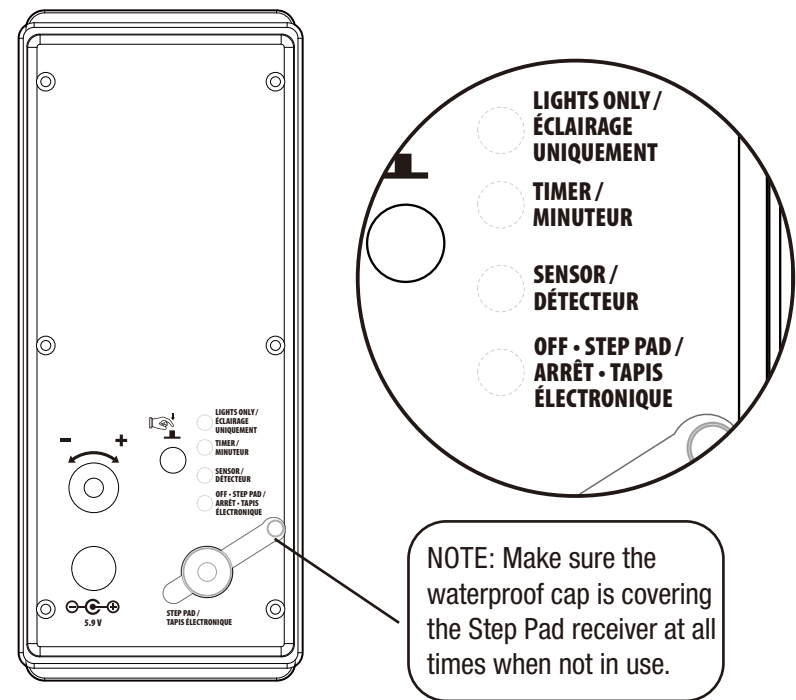

OPERATION INSTRUCTIONS:

The 8.5 ft. Knight Dullahan is powered by an adapter. Plug in the power adapter into a standard power outlet. To turn on the 8.5 ft. Knight Dullahan, press the button on the Function Control Box. Press the button again to switch to the Timer setting. Press the button a third time to switch to the Sensor Setting. Press the button a fourth time to turn the item Off.

NOTE: Set to **TIMER** or **SENSOR** mode to see the 8.5 ft. Knight Dullahan speak and move. Between sensor activations, the 8.5 ft. Knight Dullahan's LEDs will remain ON.

The item is activated by pressing the button on the Function Control Box and has the following settings:

LIGHTS ONLY / ÉCLAIRAGE UNIQUEMENT	This setting will activate the lights of the item. This setting does not have any animation or sound.
TIMER / MINUTEUR	In this setting, there is an active period of 6 hours and an inactive period of 18 hours. During the 6 active hours, to function will behave like Sensor Mode. The Infrared (IR) Sensor cannot be triggered during the inactive 18 hour period.
SENSOR / DÉTECTEUR	In this setting, the lights will always stay on, but the sound and animation of the item will activate for 1 activity cycle anytime the Infrared (IR) Sensor detects movement. The Infrared (IR) Sensor has a range of up to 4 m/13 ft. and will activate when someone comes within an 80 degree angle from left to right, as well as from above and below.
OFF • STEP PAD / ARRÊT • TAPIS ÉLECTRONIQUE	This setting will deactivate the lights, sound, and animation of the item. This setting allows the item to be activated only if triggered by using a Step Pad or Try Me Button (Not Included). The item will operate for one activity cycle with each Step Pad or Try Me activation.
	Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off .

CARE AND STORAGE INSTRUCTIONS

When not in use, store this product in its original packing. Keep away from heat and moisture.


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

CAN ICES-003(B)/NMB-003(B)

THE 8.5 FT. KNIGHT DULLAHAN IS COMPATIBLE WITH EXTERNAL TIMERS AND PRESERVES ITS SETTING WHEN THE POWER IS TURNED OFF/ON.

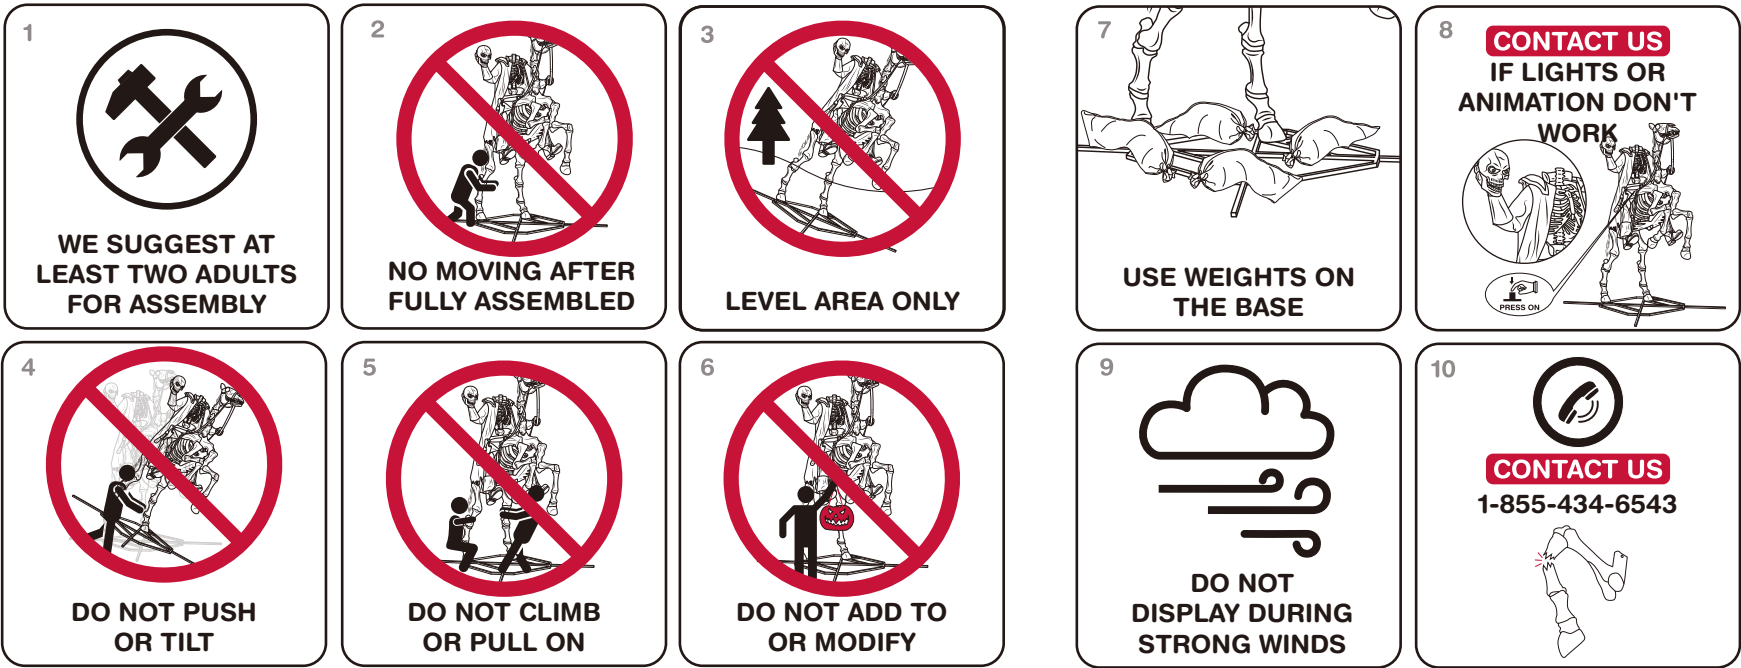

Questions, problems, missing parts? Before returning to the store, please have a copy of your receipt ready and email the SVI customer experience team (customerservice@svius.com) within 90 days of the date of purchase or call Home Accents Holiday Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday
1-855-HD-HOLIDAY (1-855-434-6543)
HOMEDEPOT.COM