



SKU#1015108092
Model#26PA05444

USE AND CARE GUIDE

5ft Wicked Woods LED Wishing Well



Questions, problems, missing parts? Before returning to the store, please have a copy of your receipt ready and email the PAC customer service team (info@pan-asian.com.hk) within 90 days of the date of purchase, or call Home Accents Holiday customer service Monday-Friday 8 a.m. - 7 p.m. EST, Saturday 9 a.m. - 6 p.m. EST.

1-855-HD-HOLIDAY (1-855-434-6543)
HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in The Home Depot through the purchase of this 5ft Wicked Woods LED Wishing Well. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing The Home Depot!

Safety Information



WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible party for FCC: Pan Asian Creations Limited.

Address: PO Box 165, New Hartford, NY 13413

For FCC email: info@pan-asian.com.hk

ACTUAL ITEM MAY VARY SLIGHTLY FROM PHOTO.

KEEP OFF! DO NOT CLIMB IN OR SIT



SAFETY INSTRUCTIONS:

1. All cautions in these operating instructions should be followed completely.
2. Do not use near water; such as a bathtub, laundry tub, kitchen sink, wet basement or swimming pool, etc.
3. Do not display the product near any heat source such as radiators, stoves, fireplaces, etc.
4. Display should be serviced by a qualified service person only. Do not attempt to service this unit beyond what is described in the operating instructions.
5. Take extra care when displaying any figure that may contain small parts around small children.
6. Use of this decoration should always be supervised by an adult.
7. Remove AC/DC adapter when not in use.



WARNING: This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep all away from the adapter, as it heats up during operation.



IMPORTANT SAFETY INSTRUCTIONS:

When using electrical products, basic precautions should always be practiced including the following:

1. READ AND FOLLOW ALL SAFETY INSTRUCTIONS.
2. Read and follow all instructions that are on the product or provided with the product.
3. Do not use an extension cord.
4. Reference the National Electrical Code, ANSI/NFPA 70, specifically for the installation of wiring and clearance from power and lighting conductors.
5. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
6. Do not install or use within 10 feet of a pool.
7. Do not use in a bathroom.
8. **WARNING: Risk of Electric Shock.** When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.
9. **WARNING: Risk of Fire.** Installation involves special wiring methods to run wiring through a building structure. Consult a qualified electrician.
10. **WARNING: Risk of Electric Shock.** Mount the unit at a height greater than 1 foot from the ground surface.
11. Not for use with receptacles that are weatherproof only when the receptacle is covered (attachment plug cap not inserted and receptacle cover closed).

SAVE THESE INSTRUCTIONS – This manual contains important safety and operating instructions for power units.



WARNING: SEVERE WEATHER USE

Do not expose this product to high winds, heavy rain, or blizzards. It is not designed for use in severe weather. To prevent damage, you must move this product indoors before severe weather is forecast.

Damage caused by failure to follow these instructions is not covered by the warranty.

DISTRIBUTED BY:
HOME DEPOT
2455 PACES FERRY ROAD
ATLANTA, GA 30339

Pre-Installation / Pre-Operation / Pre-Assembly

PLANNING INSTALLATION

Estimated installation time: 20 minutes

Number of people recommended: One

PREPARATION: Before beginning assembly the product, make sure that all parts are present. Compare parts with package contents list and diagram below. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.

PACKAGE CONTENTS





Part	Description	Quantity
A	Base Back	1
B	Base Metal Frame	1
C	Base Front	1
D	Bottom Roof Post	2
E	Top Left Roof Post w/Handle	1


Part	Description	Quantity
F	Top Right Roof Post w/Spindle Lock	1
G	Spindle w/Rope & Metal Hook	1
H	Bucket w/Rope & Metal Hook	1
I	Roof with Gauze Fabric	1
J	AC/DC Adapter, Cable & Toggle Switch	1

1 Assemble Base

- Ensure assembly is performed on level, stable ground. Align the Base Back (A) and Base Front (C) over the Base Metal Frame (B). Ensure the vertical posts on the Base slide into the corresponding slots on the bottom of the Base sections.
- Secure the two halves of the Base together using the 8 Latch Hooks (4 on each side). Refer to Fig. 1-0 for latch location and operation.

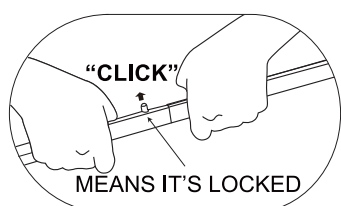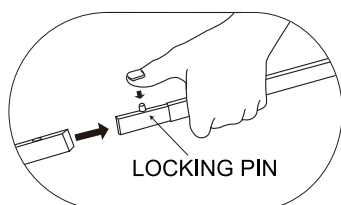

NOTE: Follow this 'Click Lock' procedure for all Support Frame assembly.

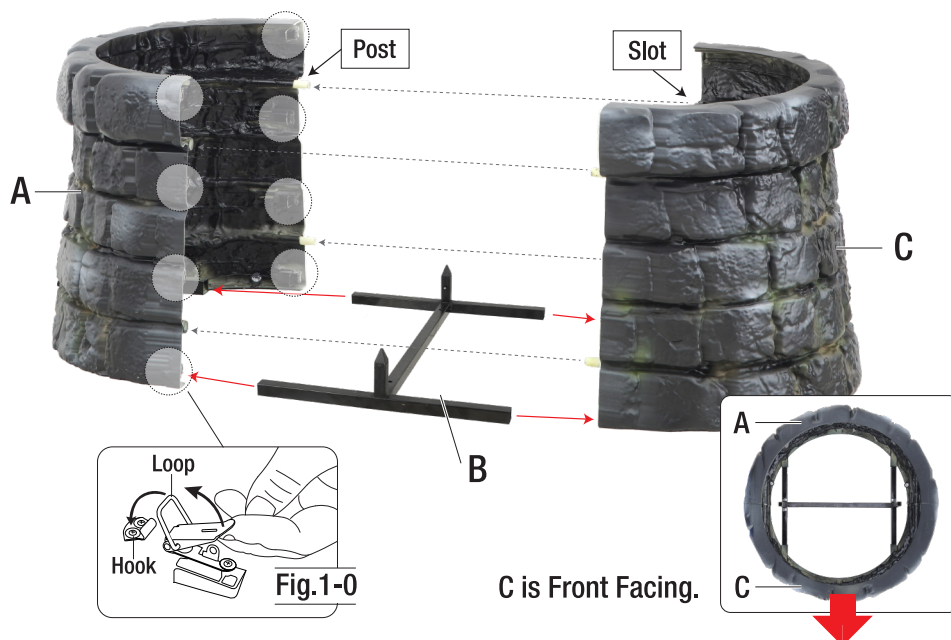

2 Assemble Left Roof Post (D & E)

- Align, insert, and 'Click Lock' the Bottom Roof Post (D) into the Top Left Roof Post w/Handle (E).



3 Assemble Right Roof Post (D & F)

- Align, insert, and 'Click Lock' the Bottom Roof Post (D) into the Top Right Roof Post w/Spindle Lock (F).






4 Attach Roof Posts to Base Metal Frame

- Insert the assembled Roof Post columns into the Base Metal Frame until they 'Click Lock' into place.

NOTE: The column with the Top Left Roof Post w/Handle (E) and the column with the Top Right Roof Post w/Spindle Lock (F) are interchangeable. You can choose to install the Handle on either the left or right side of the well based on your preference. (See Fig. 2-0).


NOTE: The Handle is Free Spinning

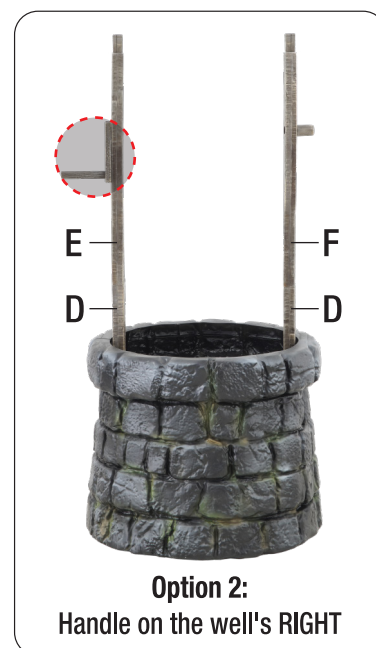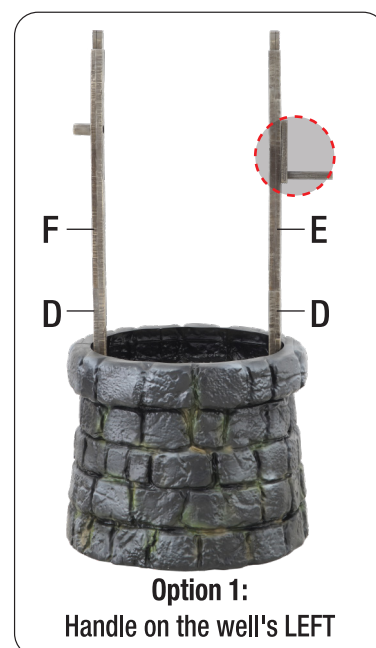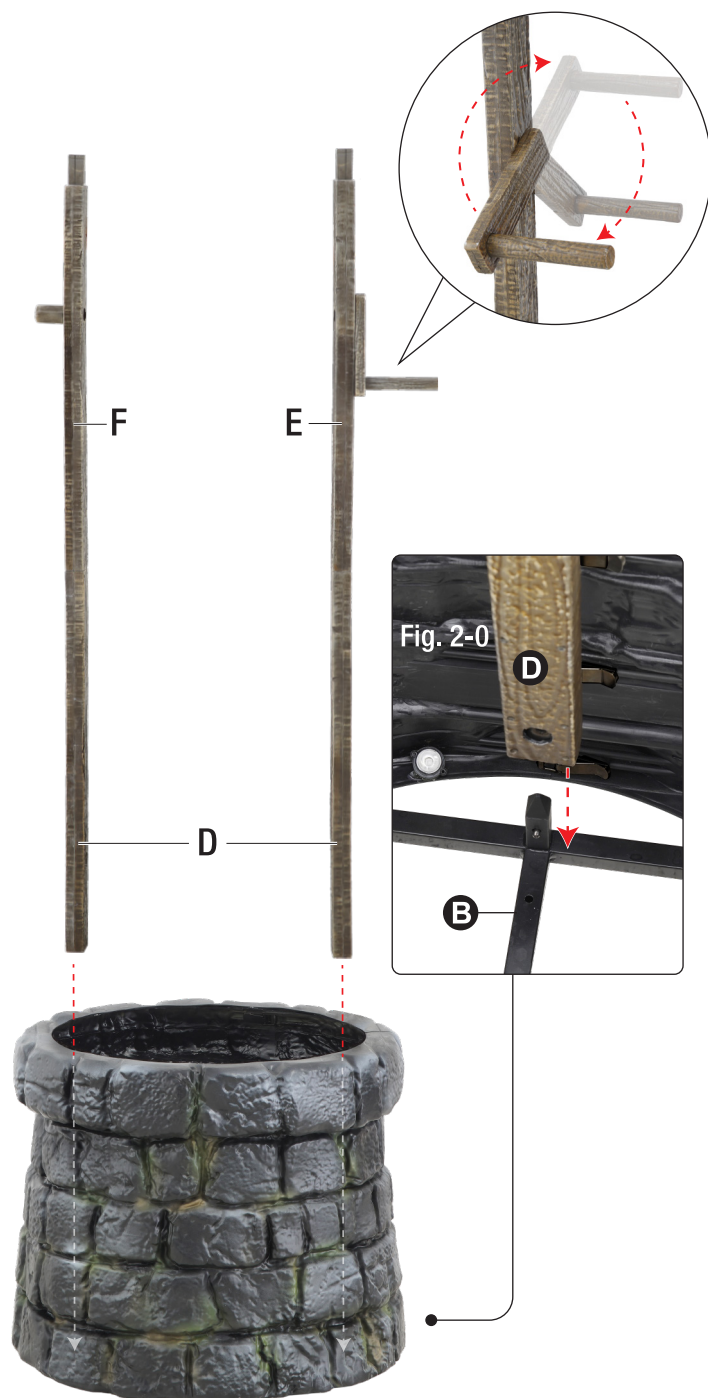

NOTE: The assembled posts (D+E and D+F) can be swapped. Both configurations shown above are correct installation methods.

5 Attach Spindle to Both Posts


- Align and insert the Spindle w/Rope & Metal Hook (G) between the Top Left (E) & Top Right (F) Roof Post w. The Spindle has flat edges on the ends that correspond to the flat edges inside the post holes. Ensure they are aligned for proper insertion. (See Fig. 3-0).

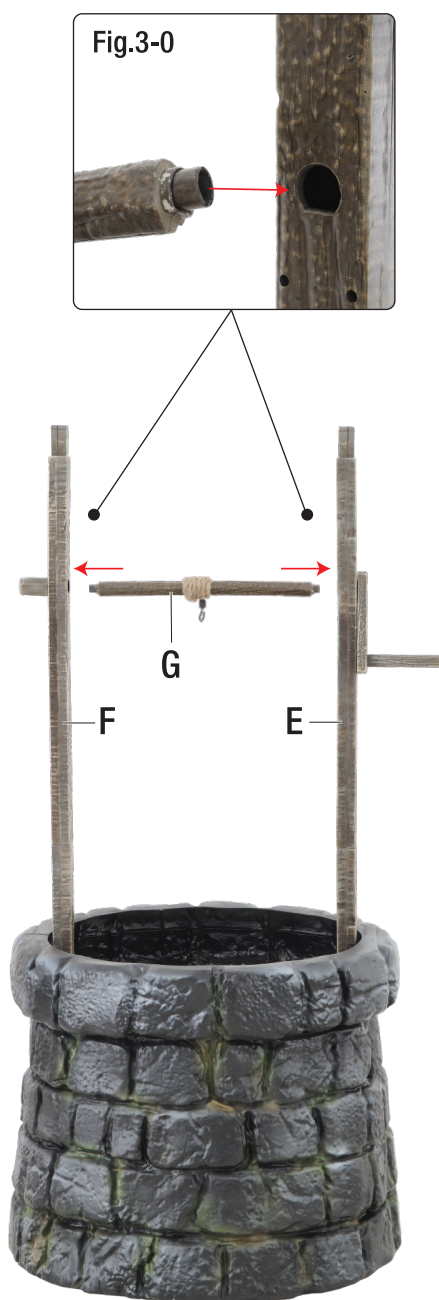

6 Hook Hemp Rope Pieces

- Attach the metal hook on the Bucket w/Rope & Metal Hook (H) to the metal loop on the Spindle w/Rope & Metal Hook (G). (See Fig. 4-0).

Ensure the hook on the Spindle rope is facing downwards to securely hold the bucket.


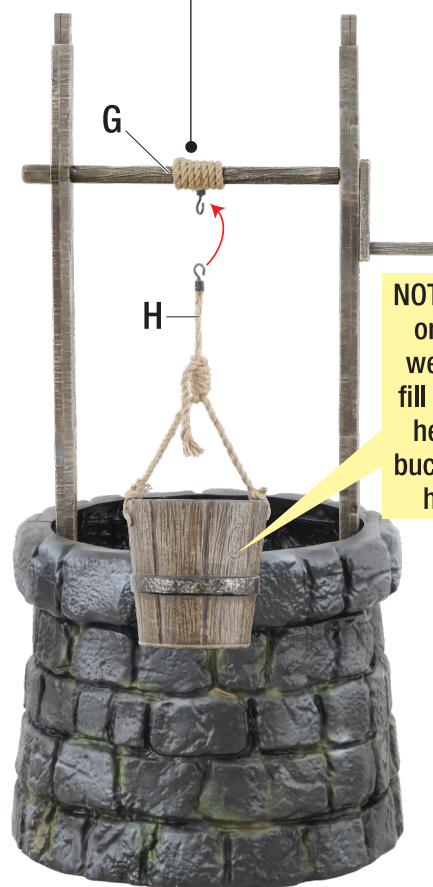


NOTE: For decorative use only. Not intended for weight-bearing. Do not fill with water, candy, or heavy objects, as the bucket features drainage holes at the bottom.

7 Attach Roof to Posts

- Align and insert the tops of both Roof Posts (E & F) into the slots on the underside of the Roof. Press down firmly until the posts are completely seated in the slots to ensure a proper fit. (See Fig. 5-0).

NOTE: Front of Roof has cracked shingles

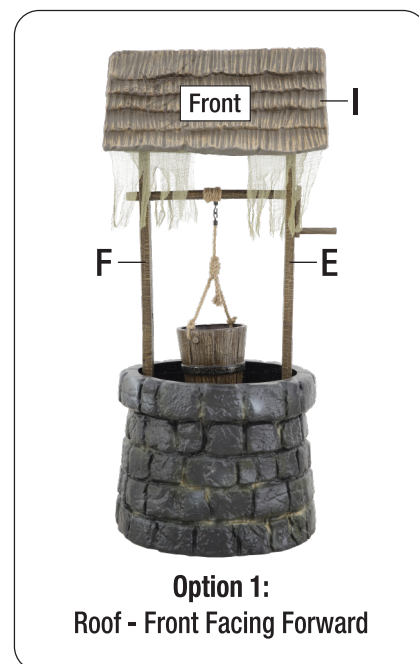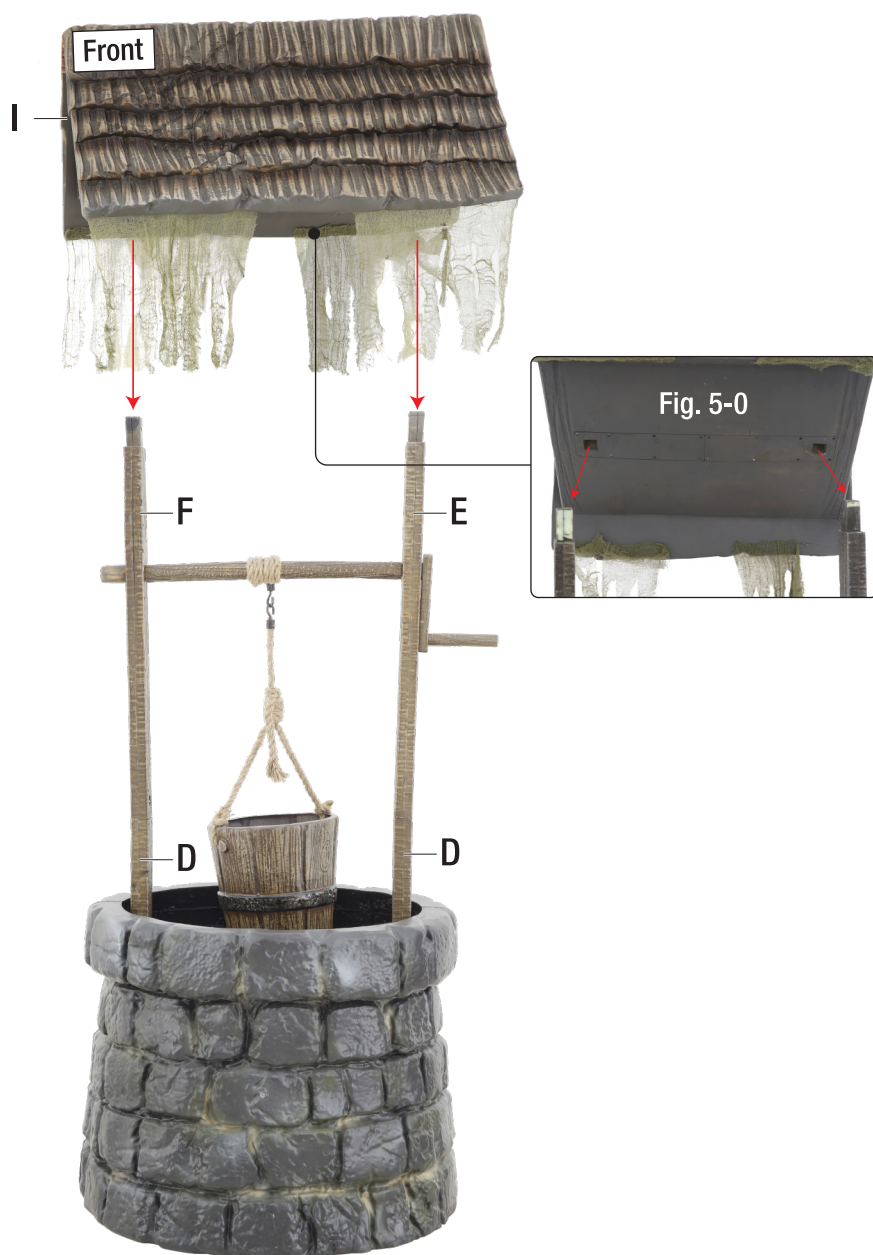


NOTE: The Roof is reversible. It can be installed with either the front or back facing forward. Both configurations shown above are correct.

8 Install AC/DC Adapter and Cable to Base

- Locate the DC Jack on the back of the Base Back (A). Connect the round DC Plug from the Adapter Cable (J) into the DC Jack and tighten the screw cap to secure the connection.
- Connect the other end of the cable to the AC Adapter. Plug the AC Adapter into a standard power outlet.
- Press the Toggle Switch (J) to the “ON” or “TIMER” position to activate the item.

NOTE: Back of Roof does not have cracked shingles

Back View

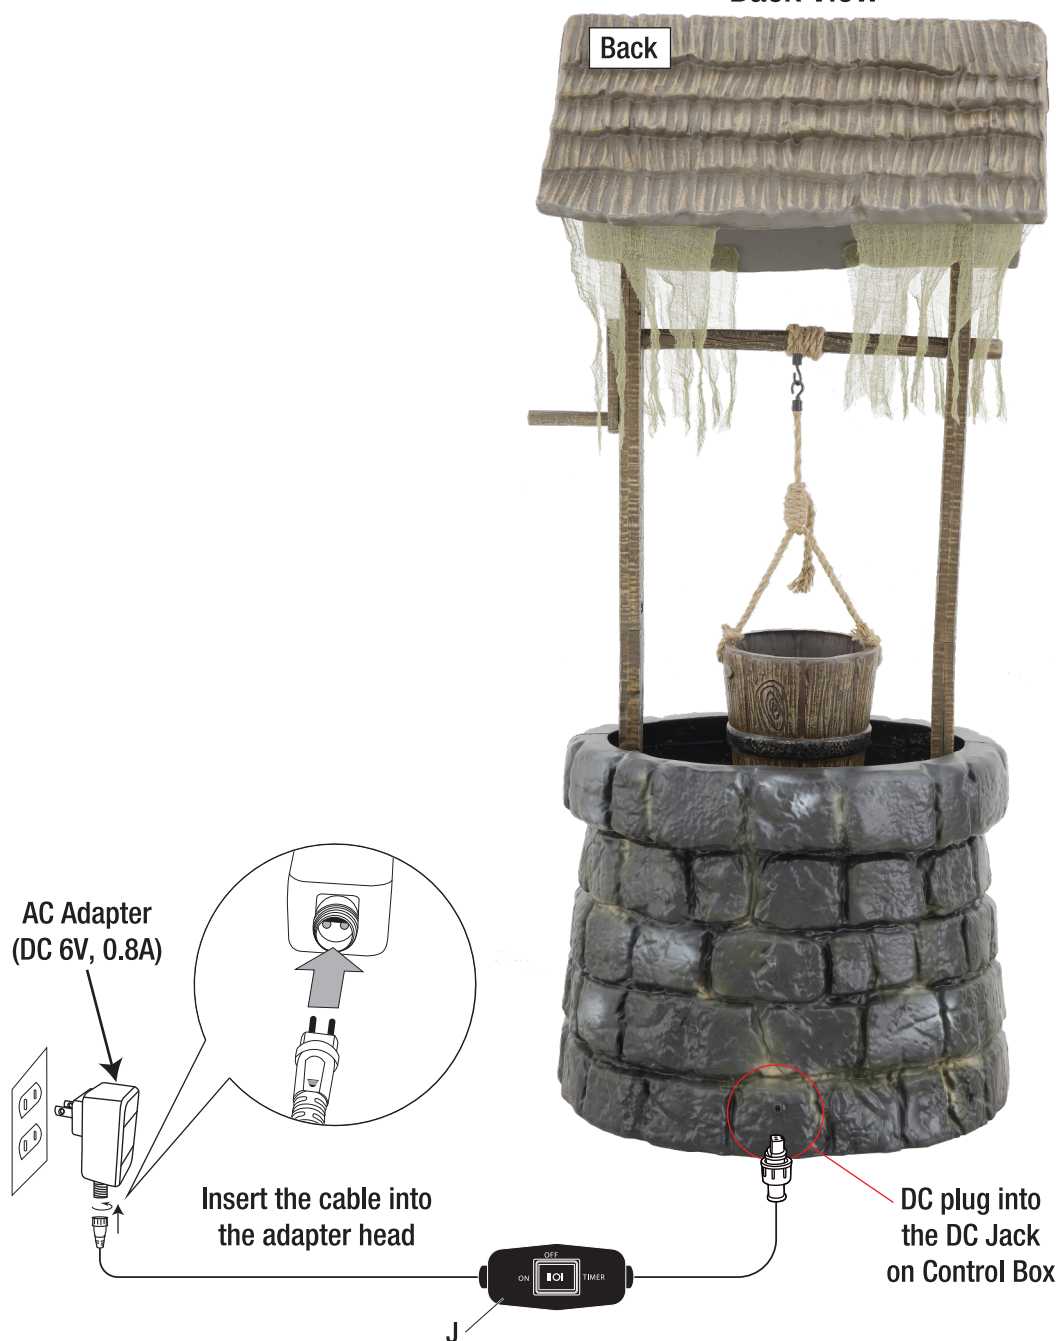

Operation Instructions

- Plug the AC/DC Adapter (J) into a standard power outlet and select the function on the ON/OFF/TIMER toggle switch, located on AC/DC Adapter and Cable (J).
- This product can be powered by a UL Listed, output 6 V/0.8A, input 100-240V/50-60Hz adapter (included).
- The ON/OFF/TIMER toggle switch is located on the AC/DC Adapter cable (J). Press switch to the "ON" position to activate continuous LED light display. To activate the Timer feature, press the switch to the "TIMER" position. The LED lights will automatically turn ON for 6 hours and OFF for 18 hours in a repeating cycle. Press the switch to the "OFF" position to deactivate the lights. Unplug the adapter when not in use.



This is not a toy and is for decorative purposes only. For indoor and outdoor use. This item is not intended for use by children under the age of 14. Do not place product near an open fire or heat source such as a radiator, stove, etc.

Care and storage instructions

For best performance operate your item indoor or outdoor. When not in use, store this product in its original packing. Keep away from heat and moisture.

Troubleshooting

Problem	Solution
The product does not work	□ 1. Check all wire connections and make sure all parts are securely attached. □ 2. Check and make sure the ON/OFF/TIMER toggle switch is pressed down all the way in either the "ON" position or the "TIMER" position. □ 3. Check to make sure the adapter is connected to a working power source. Ensure the adapter is plugged into a standard 120V household outlet. □ 4. Ensure the flexible weatherproof cover is seated properly over the ON/OFF/TIMER toggle switch. If misaligned, it may interfere with the switch function.