HOME ACCENTS Holiday™

SKU#1015112854
Model#26PA05422

USE AND CARE GUIDE

3.5ft Wicked Woods ANIMATED LED Hell Hound



Questions, problems, missing parts? Before returning to the store, please have a copy of your receipt ready and email the PAC customer service team (info@pan-asian.com.hk) within 90 days of the date of purchase, or call Home Accents Holiday customer service Monday-Friday 8 a.m. - 7 p.m. EST, Saturday 9 a.m. - 6 p.m. EST.

1-855-HD-HOLIDAY (1-855-434-6543)
HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in The Home Depot through the purchase of this 3.5ft Wicked Woods ANIMATED LED Hell Hound. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing The Home Depot!

Safety Information

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible party for FCC: Pan Asian Creations Limited.
Address: PO Box 165, New Hartford, NY 13413
For FCC email: info@pan-asian.com.hk

SAFETY INSTRUCTIONS:

1. All cautions in these operating instructions should be followed completely.
2. Do not use near water; such as a bathtub, laundry tub, kitchen sink, wet basement or swimming pool, etc.
3. Do not display the product near any heat source such as radiators, stoves, fireplaces, etc.
4. Display should be serviced by a qualified service person only. Do not attempt to service this unit beyond what is described in the operating instructions.
5. Take extra care when displaying any figure that may contain small parts around small children.
6. Use of this decoration should always be supervised by an adult.
7. Remove AC/DC adapter when not in use.

WARNING: This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep all away from the adapter, as it heats up during operation.

IMPORTANT SAFETY INSTRUCTIONS:

When using electrical products, basic precautions should always be practiced including the following:

1. READ AND FOLLOW ALL SAFETY INSTRUCTIONS.
2. Read and follow all instructions that are on the product or provided with the product.
3. Do not use an extension cord.
4. Reference the National Electrical Code, ANSI/NFPA 70, specifically for the installation of wiring and clearance from power and lighting conductors.
5. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
6. Do not install or use within 10 feet of a pool.
7. Do not use in a bathroom.
8. WARNING: Risk of Electric Shock. When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.
9. WARNING: Risk of Fire. Installation involves special wiring methods to run wiring through a building structure. Consult a qualified electrician.
10. WARNING: Risk of Electric Shock. Mount the unit at a height greater than 1 foot from the ground surface.
11. Not for use with receptacles that are weatherproof only when the receptacle is covered (attachment plug cap not inserted and receptacle cover closed.

SAVE THESE INSTRUCTIONS – This manual contains important safety and operating instructions for power units.

ACTUAL ITEM MAY VARY SLIGHTLY FROM PHOTO.

WARNING: SEVERE WEATHER USE

Do not expose this product to high winds, heavy rain, or blizzards. It is not designed for use in severe weather.
To prevent damage, you must move this product indoors before severe weather is forecast.

Damage caused by failure to follow these instructions is not covered by the warranty.

DISTRIBUTED BY:
HOME DEPOT
2455 PACES FERRY ROAD
ATLANTA, GA 30339

Pre-Installation / Pre-Operation / Pre-Assembly

PLANNING INSTALLATION

Estimated installation time: 10 minutes

Number of people recommended: one

PREPARATION: Before beginning assembly the product, make sure that all parts are present. Compare parts with package contents list and diagram above. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.

PACKAGE CONTENTS



Part	Description	Quantity
A	Body	1
B	Right Head	1
C	Left Head	1

Part	Description	Quantity
D	Plastic Chain	1
E	AC/DC Adapter and Cable	1

Installation

NOTE: Throughout the instructions, Right and Left are from the Hell Hound's face forward point of view.

1 Attach the Right & Left Heads to the Body

- ☐ Right & Left Head Cable Connections: Connect the 4-Pin and 6-Pin cable ends of the Right Head (B) to Body (A) together as shown in the Cable Connection 1 & 2 illustration. Secure the connections by tightening the screw caps. Repeat process to connect the cable ends of the Left Head (C) to Body (A) as shown in the Cable Connection 3 & 4 illustration. Ensure the excess cables are placed inside the openings at the bottom of both heads prior to attaching them to the body to prevent damaging or pinching cables.
- ☐ Align & insert the 2x tabs on the bottom of the Right Head (B) with the 2x slots on the top neck area of the Body (A), firmly press & slide down until firmly locked into place. See Fig. 1. There should be no gaps around neck when correctly attached. Repeat to attach the Left Head (C) to the Body (A).

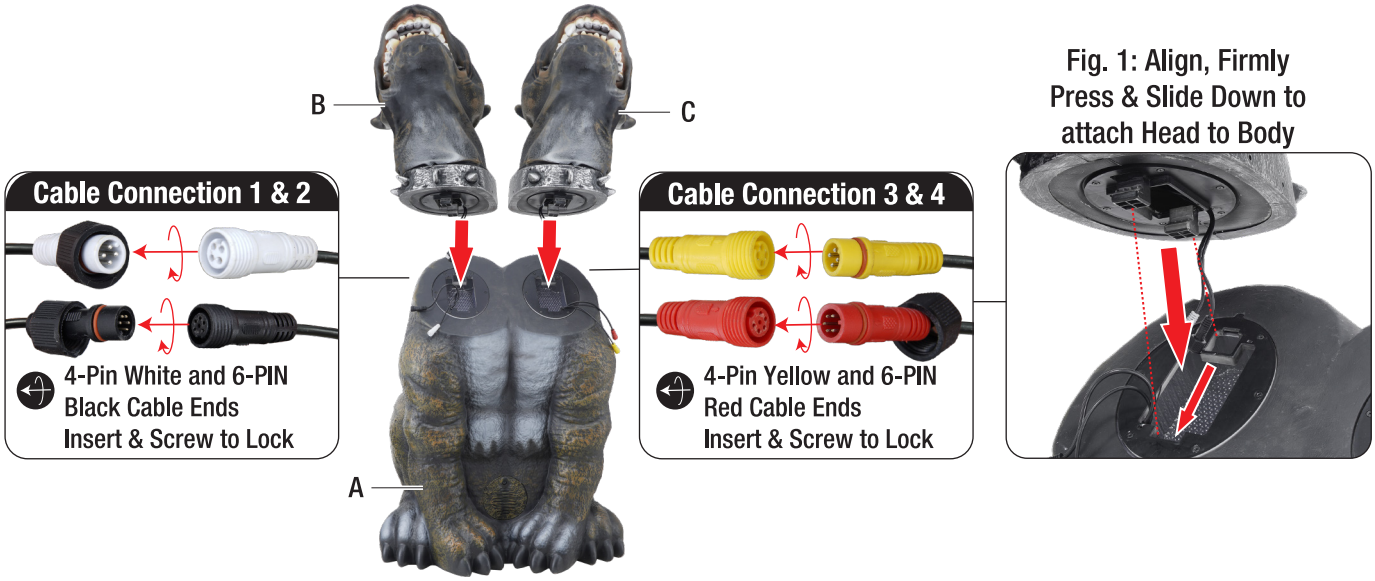

Fig. 1: Align, Firmly Press & Slide Down to attach Head to Body

2 Attach Plastic Chain to Collars

- ☐ Open the two links at the ends of the plastic chain by pulling them apart as shown in Fig. 1, spread the opened links around the D-ring at the front of both collars as shown in Fig. 2, and then release the links to close & attach the plastic chain securely to the collars.

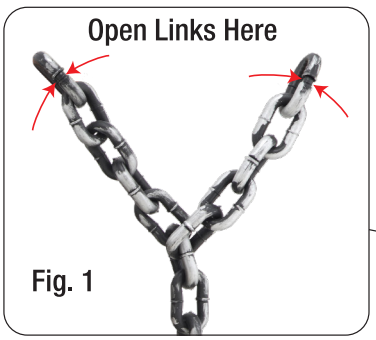

Fig. 1

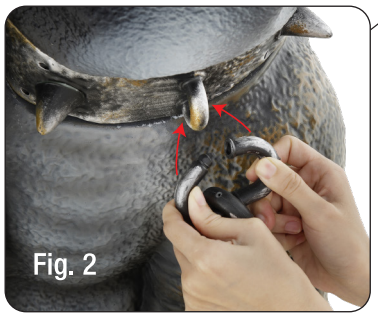

Fig. 2

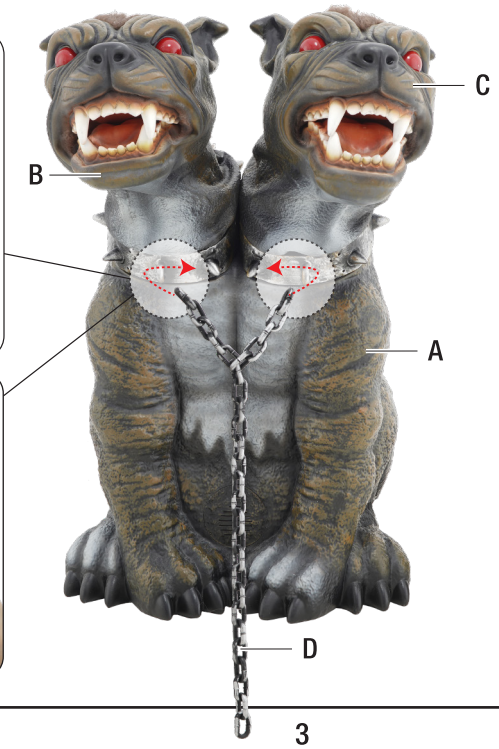



Complete Assembly

3 AC/DC Adapter and Cable Connection

- ☐ Connect the DC plug on the Adapter Cable into the corresponding DC Jack on the Control Panel located on the lower back of the Body (A), then connect the opposite end of the Adapter Cable into the power adapter. Secure the connections by tightening the screw caps.
- ☐ Plug the Adapter into a standard power outlet and adjust the settings on the Control Panel to activate.



Operation Instructions

LOCATION OF IR MOTION SENSOR

DO NOT BLOCK, OBSTRUCT OR COVER THE IR SENSOR as this will affect the ability of the item to function properly.



IR Motion Sensor Detection & Activation Range

FUNCTION CONTROLS:
NOTE: THE CONTROL PANEL IS LOCATED ON THE BACK OF THE BODY

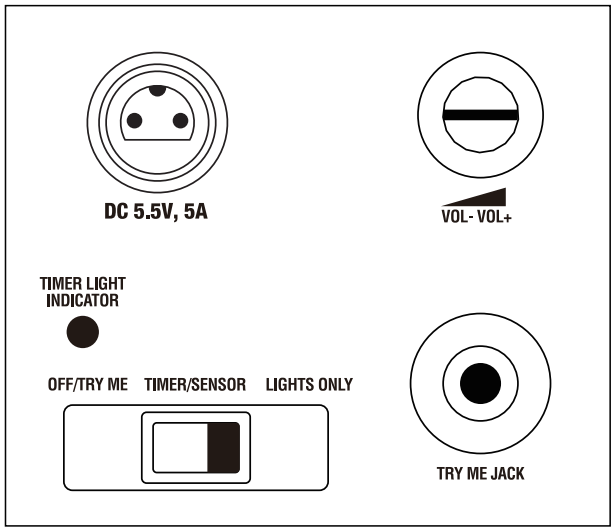

LIGHTS ONLY

Place the switch in the “LIGHTS ONLY” position to activate LED Illumination ONLY.

TIMER / SENSOR

Place the switch in the “TIMER/SENSOR” position for CONSTANT ‘ON’ LED Illumination and Motion Sensor Activated synchronized LED Lights, Sounds & Animation - on an automatic 6 hours ON / 18 hours OFF cycle. The TIMER Light Indicator shines to show the “TIMER/SENSOR” mode is currently activated. Each Sensor Activation triggers a “Cycle” of LED Lights, Sound & Animation for a set amount of time, then returns to CONSTANT ‘ON’ LED Illumination until the IR Sensor is re-triggered. NOTE: The maximum effective detection range to trigger motion sensor activation is within 10 feet, and at a 90° angle position.

OFF / TRY ME

Place the switch in the “OFF/TRY ME” position to deactivate the product and/or to activate the TRY ME product demonstration feature. To activate the product demonstration, connect the Cable from the TRY ME (Not Included) into the TRY ME JACK located on the Control Panel, then gently step or press on the TRY ME for one (1) demonstration “Cycle” of synchronized LED Lights, Sound & Animation. Unplug the Adapter, Cables, and store when not in use.

VOLUME CONTROL

Volume control dial located on Control Panel. Raise (+) or Lower (-) the volume using the volume control turn dial, turn all the way down to turn the sound off.

Operation Instructions

- □ Plug the power adapter into a standard power outlet and adjust the settings on the Control Panel, located on the back of the Body (A).
- □ This product can be powered by a UL Listed, output 5.5 V/5A input 100-240V/50-60Hz adapter (included).

⚠ This is not a toy and is for decorative purposes only. For indoor and outdoor use. This item is not intended for use by children under the age of 14. Do not place product near an open fire or heat source such as a radiator, stove, etc.

Care and storage instructions

For best performance operate your item indoor or outdoor. When not in use, store this product in its original packing. Keep away from heat and moisture

Troubleshooting

Problem	Solution
The product does not work	□ 1. Check all wire connections and make sure all parts are securely attached. □ 2. Check to make sure the adapter is connected to a working power source. Make sure the adapter is plugged into a standard 120V household outlet.
The IR Motion Sensor does not work	□ 1. Check to see that the switch is placed in the “TIMER/SENSOR” position only. □ 2. Ensure there are NO obstructions on or in front of the surface of the Motion Sensor. □ 3. Change the product placement environment and try again. □ 4. Check to see if the ambient temperature is too high. Place the product in a normal temperature environment.

03202026_2009015
Printed in China